

Quick Start Guide

 
MBP28, MBP28/2, MBP28/3, MBP28/4
MBP28 Twin, MBP28 Triple, MBP28 Quad

For a full explanation of all features and instructions, please refer to the User's Guide.

1. Setting up your digital baby monitor

1.1 Camera unit power supply


1. Insert the DC plug of the power adapter with the smaller DC plug into the DC socket in the side of the camera unit, as shown.
2. Connect the other end of the power adapter to a suitable mains socket or power outlet.

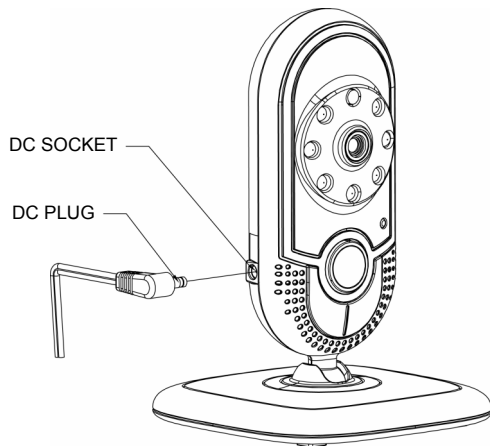

1.2 Parent unit battery installation

A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be moved without losing the link and picture from the camera unit(s). Charge the parent unit before you use it for the first time or when the parent unit indicates that the battery is low.

 1. Take off the belt clip/stand.
2. Slide off the battery compartment cover.
3. Insert the plug of the battery pack into the socket inside the battery compartment, and fit the battery pack into the compartment.
4. Replace the battery compartment cover and reinstall the belt clip/stand (refer to section 1.3).
5. Insert the DC plug of the power adapter with the bigger DC plug into the DC socket in the side of the parent unit.
6. Connect the other end of the power adapter to a suitable mains socket or power outlet.
7. The **Charging Indicator** comes on.

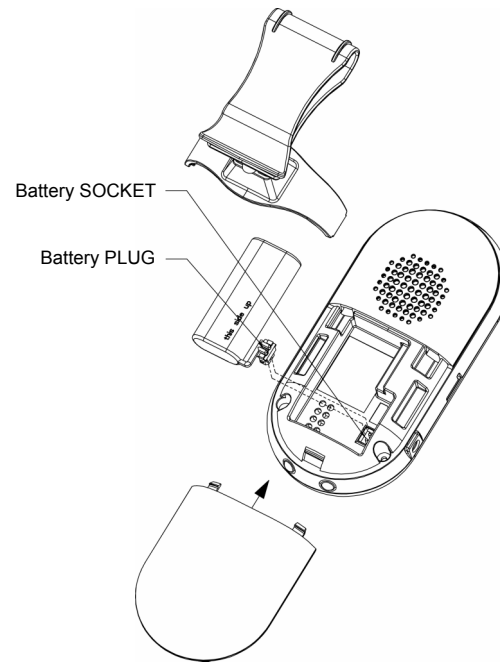


1.3 Belt clip/stand on parent unit

1. The belt clip/stand attaches to the back of the parent unit and clips into the locking slots on each side.

NOTE

 It will only fit one way, as indicated by UP and the arrows on the inside of the clip.



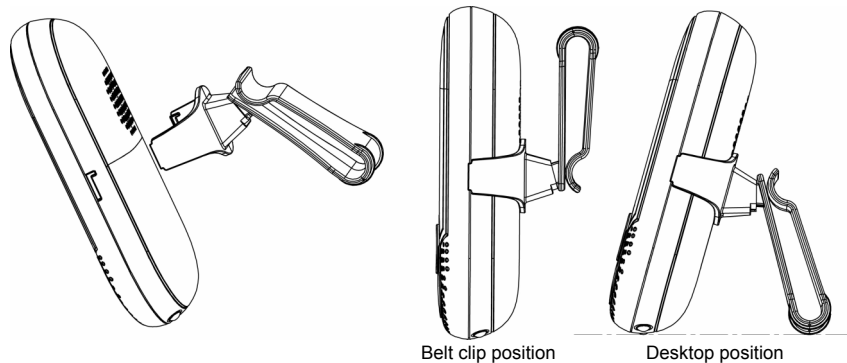



2. The unit comes with the accessory fitted in the belt clip position.
3. You can convert it into the stand mode, by simply pulling the back part of the clip out slightly and then rotating it by half a turn, as shown in the diagram below.









Belt clip position

Desktop position

2. Basic operation of the keys

Parent unit	
	In idle mode: Press to increase the speaker volume. In menu mode: Press to move up the menu list.
	In idle mode: Press to access the main menu. In menu mode: Press to access a sub-menu, or confirm the settings.
	In idle mode: Press to decrease the speaker volume. In menu mode: Press to move down the menu list.
	In idle or menu mode: Press and hold to talk back through the camera unit. Release to quit the talk mode. When LCD is off: Press to turn on the LCD.
	In monitoring mode: Press to turn on/off the LCD. In menu mode: Press to go back to idle mode.
	In power off mode: Press to power on the parent unit. In monitoring mode: Press to switch to the next camera unit. In idle or menu mode: Press and hold to power off the parent unit. In menu mode: Press to cancel settings and go back to the previous level.

Camera unit	
	Press to increase the speaker volume.
	Press to power on the camera unit. Press and hold to power off the camera unit.

	Press to decrease the speaker volume.
	Press to stop the lullaby playing.
	Press to start playing the selected lullaby.
	Press to start playing the selected lullaby when the camera unit is linked with the parent unit. During lullaby playing, press to select and play the other lullabies.

3. General information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service at
 - UK 0845 218 0890
 - ROI 08187 62092



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.
© 2011 Motorola Mobility, Inc. All rights reserved.

Version 2.0
Printed in China