



motorola



User's Guide

Wi-Fi® Video Baby Camera

Models: MBP67CONNECT

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Wi-Fi® Video Baby Camera!

Thank you for purchasing your new Motorola Wi-Fi® Video Baby Camera. Now you can view and hear your baby sleep in the room or you can monitor your older children in their playroom. You can install the Camera only from your iPhone®/iPad® or Android™ devices and view the Camera video from your PC or Notebook, as well as from your iPhone®/iPad® or Android™ devices.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

+44 (0) 844 557 0890 (UK only)*

**Calls cost 7p per minute plus your telephone company's access charge*

+44 (0) 8187 62092 (ROI)

On the Web: www.motorolahome.com/support

Email: support@motorolahome.com

 
This User's Guide provides you with all the information you need to get the most from your product.

Got everything?

- 1 x Wi-Fi® Camera Unit
- 1 x Power Adapter
- 1 x Quick Start Guide

In multi-camera packs, you will find one or more additional Camera Units with power adapter units.

Overview of Your Baby Unit

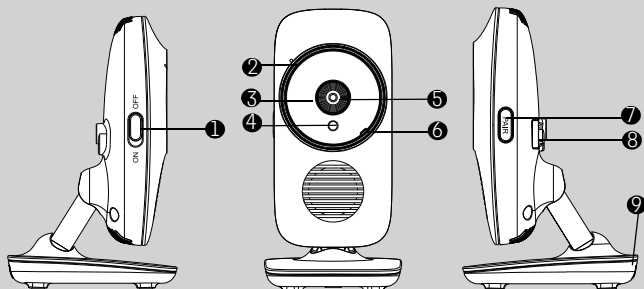

- | | |
|--|---|
| 1. POWER ON/OFF switch
Slide to turn the Baby Unit on or off. | 7. PAIR button
Press and hold to pair with a Parent Unit or Wi-Fi®. |
| 2. Microphone | 8. Power Adapter Socket |
| 3. Infrared LEDs (6) | 9. Temperature Sensor |
| 4. Light Sensor (Night Vision Mode) | |
| 5. Camera Lens | |
| 6. Power/Link indicator
Lights up in Blue when the Baby Unit is turned on and linking to the Parent Unit. Flashes in Blue when the Baby Unit is linked to the Parent Unit, or flashes in red when the Baby Unit is in pairing mode. Off when the Baby Unit is powered off. | |

Important guidelines for installing your Digital Video Baby Camera

- The Camera works with these Motorola Digital Video Baby Monitors: MBP667CONNECT, MBP845CONNECT and MBP845CONNECT-2.
- Always ensure that you have a good Wi-Fi® connection available.



Table of contents


1. Safety Instructions	5
2. Minimum System Requirements.....	7
3. Getting Started - Connecting Devices	8
3.1 Setup.....	8
3.2 User Account and Camera Setup on Android™ Devices	10
3.2.1 Power ON and Connect the Camera	10
3.2.2 Download Hubble for Motorola Monitors App	10
3.2.3 Run Hubble for Motorola Monitors App on Android™ device	10
3.2.4 Add the Camera to your account	11
3.3 User Account and Camera Setup on iPhone®/iPad®	14
3.3.1 Power ON and Connect the Camera.....	14
3.3.2 Download Hubble for Motorola Monitors App	14
3.3.3 Run Hubble for Motorola Monitors App on iPhone®/iPad® ...	14
3.3.4 Add the Camera to your account	15
4. Camera Functions:.....	20
4.1 Connecting the Camera Unit to power	20
4.2 Overview of the Features on Hubble App	20
5. Working with PC/Notebook	23
6. Procedure for Resetting the Camera	23
7. Disposal of the Device (Environment)	24
8. Cleaning	25
9. Help	26
10. General Information	32
11. Technical Specifications	37

1. Safety Instructions



WARNING:

 Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1m away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

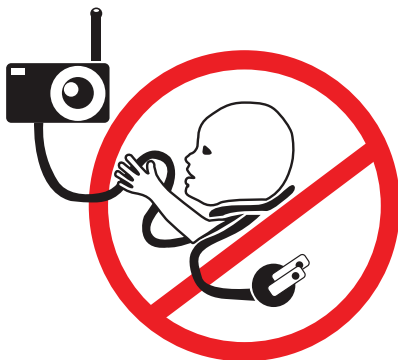

Wi-Fi[®] CAMERA SET UP & USE:

- Choose a location for the Wi-Fi[®] Camera Unit that will provide the best view of your baby in his/her cot.
- Place the Wi-Fi[®] Camera Unit on a flat surface, such as a chest of drawers, desk, shelf or wall-mount it using the keyhole slot in the Camera base.
- NEVER place the Wi-Fi[®] Camera Unit or cords within the cot.

WARNING

This Wi-Fi[®] Camera Unit is compliant with all relevant electromagnetic field standards and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device

- Adult assembly is required due to small parts. Keep all small parts away from children.
- This product is not a toy. Do not allow children to play with it. •
- This Wi-Fi[®] Camera Unit is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not cover the Wi-Fi[®] Camera Unit with a towel or blanket.
- Test the Wi-Fi[®] Camera Unit and all its functions so that you are familiar with it prior to use.
- Do not use the Wi-Fi[®] Camera Unit near water.
- Do not place the Wi-Fi[®] Camera Unit near a heat source.
- Do not touch the plug contacts with sharp or metal objects.

CAUTION

The Unit shall be setup and used so that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

2. Minimum System Requirements

Web Portal

- Windows[®] 7
- Mac OS[®] 10.7
- Chrome[™] 24
- Internet Explorer[®] 9
- Safari[®] 6
- Java[™] 7
- Firefox[®] 18.0
- Adobe[®] Flash[®] Player 15.0

Android[™] System

- Version 4.2 or above

iPhone[®]/iPad[®] iOS

 
- Version 7.0 or above

High Speed (Wi-Fi[®]) Internet

- At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <http://www.speedtest.net>)


3. Getting Started - Connecting Devices

How does it work?

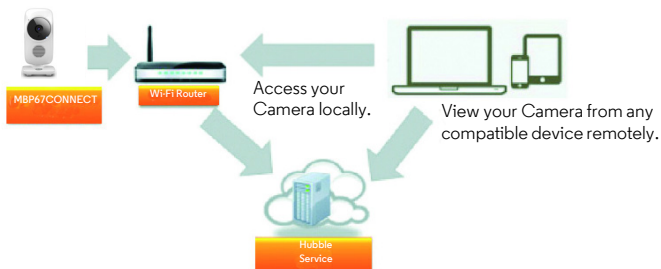

When a user tries to access the Camera, the Hubble server will authenticate the user's identity before it grants access to the Camera.

 3.1 Setup

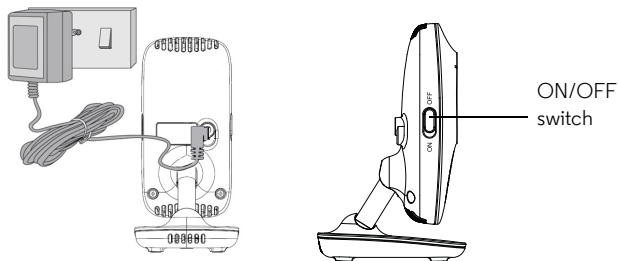

- Connect the power adapter to a mains power socket and insert the plug into the DC power socket on the back of the Camera Unit.
- Slide the ON/OFF switch to the ON position.

- The Camera Unit must be within range of the Wi-Fi® router with which you want to connect. Make sure that you have the password of the router for the setup process.

Behavior of the status Indicator LED:

Pairing and setting up	Flashes slowly in red
Unconnected	Flashes slowly in blue
Connected	Lights up in blue
Ready for connection	Flashes slowly in blue

Note

You can only setup via a compatible smartphone or tablet, and not via a PC.

3.2 User Account and Camera Setup on Android™ Devices

What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- Device with Android™ system version 4.2 and above

3.2.1 Power ON and Connect the Camera

- Connect the power adapter to an electrical outlet and insert the plug into the DC power socket on the back of the Camera Unit.
- Make sure that the ON/OFF switch is in the ON position.
- The Camera's Red LED flashes after the Camera has finished booting. When you hear one beep, this means that the Camera is ready for setup.

3.2.2 Download Hubble for Motorola Monitors App

- Go to Google Play™ Store to search for "Hubble for Motorola Monitors".
- Download "Hubble for Motorola Monitors" App from Google Play™ Store and install it on your Android™ device

3.2.3 Run Hubble for Motorola Monitors App on Android™ device

- Ensure that your Android™ device is connected to your Wi-Fi® router.
- Run "Hubble for Motorola Monitors" App, enter your account information, read through the Terms of Service, then select "I agree to the Terms of Use" before you tap **Create**. (Picture A1)

Note

 
*If you already have a Hubble App account, please select **Already have an Account?** to go to the next step.*



A1


3.2.4 Add the Camera to your account

- Tap **+** on the top right corner of the screen to add camera. (Picture A2)

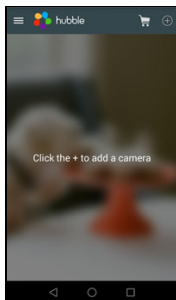

A2

 
- The following setup instructions will appear on the screen. (Picture A3)

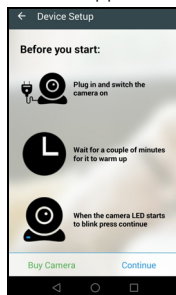

A3


- Plug in and switch on the camera, and wait for a couple of minutes for it to warm up.
- Tap **Continue** when the Camera LED starts to blink.

 - The following setup instructions will appear on the screen. (Picture A4)

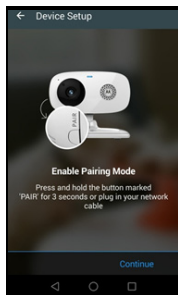


A4

 - Press and hold the **PAIR** button on the Camera Unit for 3 seconds. You will then hear a beep tone, followed by a voice prompt indicating that the Camera is ready for pairing.
- Tap **Continue**.
- The App will automatically search for and connect to your Camera as shown in the pictures below. (Pictures A5, A6)
- The blue/red colour LED on the Camera Unit will flash.

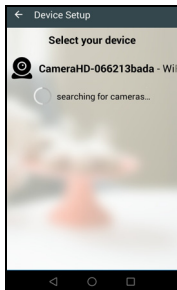


A5

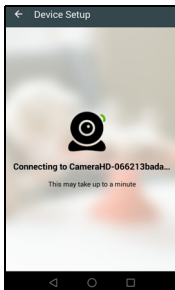 


A6

 - Select your Wi-Fi® Network, enter your password and then tap **Connect**. (Pictures A7, A8)

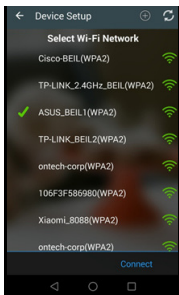


A7

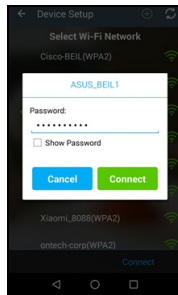 


A8

 - It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status. (Pictures A9, A10)
- If connection fails, please tap **Retry** and repeat the steps starting from 3.2.4.

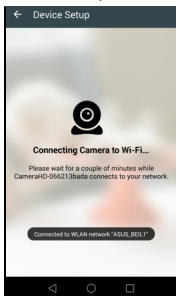

A9

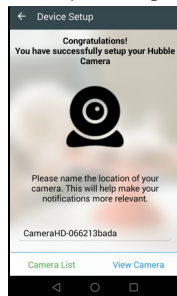 

A10

- Tap **View Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will light up in blue.

3.3 User Account and Camera Setup on iPhone®/iPad®

What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- iPhone® / iPad® with iOS version 7.0 and above

3.3.1 Power ON and Connect the Camera

- Connect the power adapter to an electrical outlet and insert the plug into the DC power socket at the back of the Camera.
- Make sure that the ON/OFF switch is in the ON position.
- The Camera's red LED flashes after the Camera has finished booting. When you hear one beep, this means that the Camera is ready for setup.

3.3.2 Download Hubble for Motorola Monitors App


- Go to App Store to search for "Hubble for Motorola Monitors".
- Download "Hubble for Motorola Monitors" App and install it on your iPhone®/iPad®.

3.3.3 Run Hubble for Motorola Monitors App on iPhone®/iPad®

- Ensure that your iPhone®/iPad® is connected to your Wi-Fi® Router.
- Run the "Hubble for Motorola Monitors" App, enter your account information, read through the Terms of Service, and then select "I agree to the Terms of Service" before you tap **Create**. (Picture i1)


Note:


If you already have a Hubble App account, please select Already have an Account? to go to the next step (Picture i1).

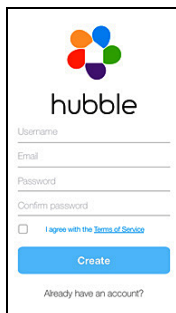

i1


3.3.4 Add the Camera to your account

 - Tap  on the top right corner of the screen to add camera. (Picture i2)

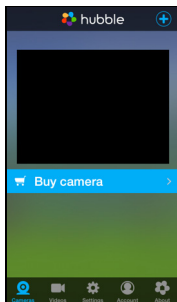


i2

 - The following Bluetooth setup instructions will appear on the screen. (Picture i3)

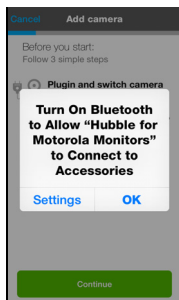


i3

 - Tap **Settings** and activate Bluetooth on your iPhone®/iPad®. (Pictures i4,i5)

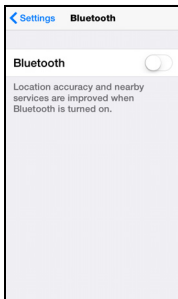


i4

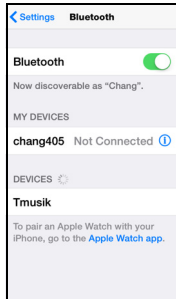 

i5

 
- Press the **HOME** key to return to the home screen, then tap on "Hubble for Motorola Monitors" App to resume setup.
- The following setup instructions will appear on the screen. (Picture i6)
Note that if Bluetooth is on, you will be brought to this step directly.

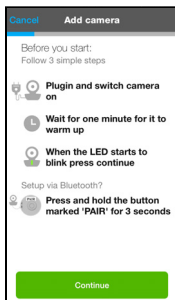


i6

- Wait for a couple of minutes for the Camera Unit to warm up and tap **Continue** when the Camera LED indicator starts to blink.

 - The following will appear on the screen. (Pictures i7, i8)

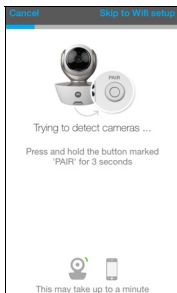


i7

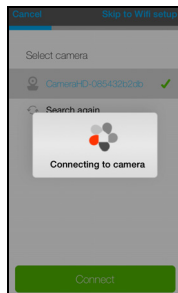 


i8

 - Name the location of your Camera Unit and tap **Continue**. (Pictures i9, i10)

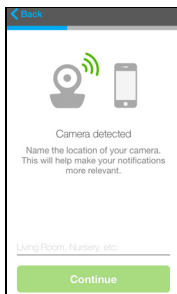


i9

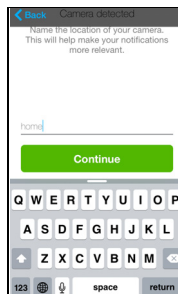 


i10

 - The Camera Unit will search for the Wi-Fi® network (Picture i11) and display a list of available networks. (Picture i12)

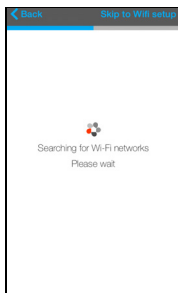


i11

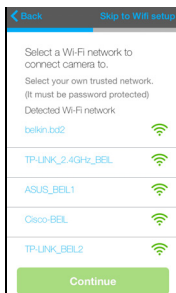 


i12

 - Select your Wi-Fi® network and tap **Continue**. (Picture i13)
- Enter your Wi-Fi® password and tap **Next**. (Picture i14)

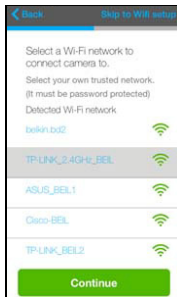


i13

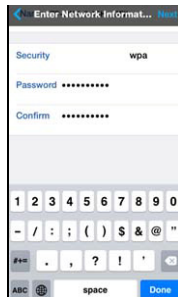 


i14

- It will take a few minutes for the Camera Unit to connect to the Wi-Fi® network before showing the connection status. (Pictures i15, i16)

 - If connection fails, tap **Retry** and repeat the steps starting from 3.3.4.

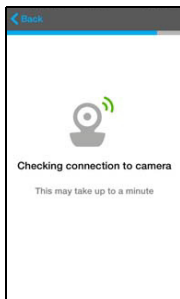

i15

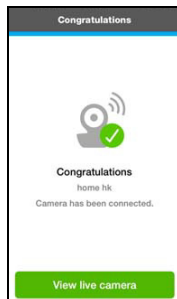 

i16









- Tap **View Live Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will light up in blue.







4. Camera Functions:








4.1 Connecting the Camera Unit to power

- Connect the power adapter to an electrical outlet and insert the plug into the DC power socket on the back of the Camera Unit.
- Slide the ON/OFF switch to the ON position. The power indicator LED will light up in green. (Note: To switch off the device, slide the ON/OFF switch to OFF.)
- Run the Hubble App on your smart device.

4.2 Overview of the Features on Hubble App

	Menu	<ul style="list-style-type: none"> • Tap Cameras  to access the camera list. • Tap Event Log  to access the video record list that is triggered by Motion or Sound detection. • Tap Account  to access user Profile, subscription Plan, Notifications setting, Remote Connection Setting and About Hubble
	Photo/Video	<ul style="list-style-type: none"> • Take a photo or record a video from your Camera. • Tap the Video icon  to activate Video function. Tap and hold the red button  to start recording and release to stop. • Tap the Camera icon  to switch to Camera mode. You can capture photos from Camera view. <p>Note: <i>Photos and videos will be stored in the internal flash memory of your smart device, and can be accessed via the Gallery or Media Player (Android™ Device). To play videos, please use the Hubble App.</i></p>

	Lullaby	Tap to access the Melody menu and select one of the 5 pre-set melodies you wish to play on your Camera Unit.
	Temperature Measure	The temperature reading from the temperature sensor at the back of the Camera Unit will display on the screen of your Android™ device. The readings will turn RED if the temperature goes beyond the High/Low temperature that was set in your Account.
	Two-way communication	Tap to activate the function. Press the round button  once to speak through the Camera Unit. Toggle the button again to listen to the audio feedback from the Camera Unit.
	Speaker	Tap to toggle speaker on or off.
	Zoom	Slide the scroll bar on the right hand side of the screen to zoom in or zoom out. You can also use the pinch-in and pinch-out gestures to zoom out or zoom in a picture. To use pinch-to-zoom gesture, your device must support multi-touch technology.

	Camera Setting	<p>You can change the Camera settings by tapping on the  Settings icon.</p> <ul style="list-style-type: none"> • Tap Details to review Camera Name, Cloud Subscription, Change Image, Timezone, Camera Model, Firmware Version and Delete All Events. • Tap Notifications to set the sensitivity of Sound Detection, Motion Detection and to set Alerts for High temperature (Up to 33 °C or 91 °F) / Low temperature (down to 10° C or 50 °F). • Tap Settings to set Ceiling mount, Brightness and Volume.
	Add Camera	<p>Enter Add Camera procedures.</p>
	Delete All Events	<p>Tap to delete all events.</p>
	Select Events	<p>Check the box to select recorded event(s).</p>
	Edit Events	<p>Tap to select and delete event(s).</p>
	Delete Events	<p>Tap to delete selected event(s).</p>

5. Working with PC/Notebook

- Go to <https://app.hubbleconnected.com/#login>

Enter your **User Name** and **Password**, and then click **Login** if you have already created an account.

- Click on the Camera list paired in your account via Android™ device or iPhone®/iPad®, and the Camera view will appear on screen. You can easily stay connected with your favorite people, places and pets with live video streaming.
- On the website, you can change the **Settings** by following the menu instructions.

6. Procedure for Resetting the Camera

Note: If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset. Please reset the Camera with the following procedures:

1. Slide the ON/OFF switch to OFF.
2. Press and hold the PAIR button, then slide the ON/OFF switch to ON.
3. Release the PAIR button when you hear a confirmation beep and wait for the Camera Unit to complete an internal reset procedure. The LED indicator will turn red and flash slowly when the Camera Unit is reset successfully.
4. You can add your Camera again by following the steps in section 3.2.4 for Android™ devices or in section 3.3.4 for iOS devices.

7. Disposal of the Device (Environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

8. Cleaning

Clean your Wi-Fi® Camera Unit with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the Wi-Fi® Camera Unit with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- Keep your Wi-Fi® Camera Unit away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability of your Wi-Fi® Camera Unit. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

IMPORTANT

Always switch off and disconnect the power adapter before cleaning your Wi-Fi® Camera Unit.

9. Help

Noise interference

To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.

Use of other 2.4 GHz products, such as Bluetooth® systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 5ft away from these types of products, or turn them off if they appear to be causing interference.

Lost connection

Check your Wi-Fi® settings. If necessary reconnect your Wi-Fi®. Ensure the Wi-Fi® Camera Unit is switched ON. Wait a few minutes to connect to the Wi-Fi® system.

If you forget your password

If you do not remember your password, tap **Forgot password** and submit your e-mail address. A new password will be sent to your e-mail address immediately.

Troubleshooting

Category	Problem Description / Error	Solution
Account	I am unable to login even after registration.	Please check your user name and password.
Account	I receive an error message saying: "Email ID is not registered".	Please ensure that you have registered with us. Tap Create Account to create an account.
Account	What do I do if I forget my password?	Click on the "Forgot Password" link on https://app.hubbleconnected.com/#lostpassword OR on your Android™ or iOS application. An email will be sent to your registered email address.

Account	I am unable to receive a new password although I have used the "Forgot password" option.	<ol style="list-style-type: none"> 1. The e-mail might have been sent to your Junk Mail Folder. Please check your Junk Mail Folder. 2. There might be a delay in getting your e-mail. Please wait a few minutes and refresh your email account.
Connectivity Issues	I get a message: We are having problems accessing your Camera. This could be due to the lack of an internet connection. Please wait and try again later.	<ol style="list-style-type: none"> 1. Please try again in a few minutes. This could be because of any issue with your internet connection. 2. If the problem remains, please restart your Camera to check if this fixes the problem. 3. Please restart your Wireless Router.
Viewing Camera	When I am in "remote mode", the video stops after 5 minutes. How do I view for longer?	<p>When you are accessing your Camera via a network different from your home network (over the internet) your video times out after 5 minutes.</p> <p>You can click on the Camera again from the Android™/iOS application to start streaming again.</p> <p>If you are accessing from your web-browser, then you can press on the Reload button to start viewing your Camera video stream again.</p>
Features	The sound alert setting threshold is not right.	You can Adjust Sound Sensitivity to trigger notifications under Camera Setting menu.

Setting Up	While I am adding a new Camera to my account, I am not able to find any Cameras to add.	If you are trying to add a Camera which has previously been added into your account or another account, you will first have to reset the Camera. This can be done by pressing and holding the PAIR button on the Camera for 5 seconds.
General	What are the supported browsers for accessing from my PC/ Mac?	We recommend using Google Chrome 24 or above. However the following browsers are also supported: Internet Explorer 9.0 or above (for PC), Safari 6.0 or above (for Mac) or Firefox 18.0 or above (both PC or Mac).
General	What is the significance of LED flashing?	<p>A flashing LED indicates the following status:</p> <p><u>Slow flashing:</u> 1. Your Camera is in setup mode. You can add the Camera to your account in this mode. Out of the box, the Camera is in Setup mode. To reset to Setup mode, press and hold the PAIR button on the Camera until you hear a beep.</p> <p><u>Slow flashing:</u> 2. The Camera is either connecting to the router or has lost the link to the router. Please ensure that the Camera is in the Wi-Fi[®] signal range.</p> <p><u>LED is stable:</u> The Camera is connected to the Wi-Fi[®] network.</p>
Connectivity Issues	I am not able to access my Camera.	Please check if the Camera is within Wi-Fi [®] range. If the LED on your Camera is flashing slowly, please try to move the Camera closer to the router for better Wi-Fi [®] connectivity and try again.

Setting Up	During setup on devices for Android™ and iOS, I am not able to find my Camera during the last step and the setup fails.	Please reset the Camera to setup mode and try again. Press and hold the PAIR button on the Camera until you hear a beep. Wait for a minute for the Camera to restart. When the Camera LED is flashing, this indicates that it is in setup mode. Now restart the setup from your smartphone again.
Connectivity Issues	Even though I am accessing my Camera from the same Wi-Fi® network, I still find my Camera is shown as remote. I can only access it for 5 minutes at a time.	Please check your wireless router settings. For example, for Buffalo brand routers there is an option called Wireless Isolation. Please disable this option.
Connectivity issues	I found interference caused by my other webcam devices.	Video streaming performance is related to internet bandwidth, especially if you have 2 or more video streaming devices that are working through the same router.
Camera	When I try to view the Camera, I get a prompt for Camera firmware upgrade. What should I do?	Please upgrade your firmware. This takes around 5 minutes. We push upgrades from time to time to improve Camera features.

General	Which platforms are supported for accessing my Camera?	<p>Minimum requirement:</p> <p>Windows® 7*</p> <p>*Java browser plug-in needed</p> <p>Mac OS® version 10.7</p> <p>Chrome™ version 24</p> <p>Internet Explorer® version 9</p> <p>Safari® version 6</p> <p>Java™ version 7</p> <p>Firefox® version 18.0</p> <p>Adobe® Flash® Player 15.0</p> <p>Android™ 4.2</p> <p>iPhone® /iPad® iOS version 7.0</p>
General	I do not hear any sound when I am accessing a remote Camera.	You can tap on the speaker icon in the video stream screen to hear audio. By default the audio is not ON when you are accessing a remote Camera.
General	What is the meaning of "Local Camera" and "Remote Camera"?	When you are accessing your Camera from the same wireless network (Home) in which it is configured, it is a Local Camera. When you are accessing your Camera away from your home it is a Remote Camera. You may be using 3G, 4G or 4G LTE or a Wi-Fi® connection outside of your home.

General	How do I download the App for Android™ and iOS devices?	<p>Android™:</p> <ul style="list-style-type: none"> - Open the Google Play Store on your Android™ device. - Select Search - Type in "Hubble for Motorola Monitors" - The results will show the Hubble App - Select to install it <p>iOS Device:</p> <ul style="list-style-type: none"> - Open the App StoreSM - Select Search - Type in "Hubble for Motorola Monitors" - The results will show the Hubble App - Select to install it
Setting up	When the video is cut off, the application attempts to reconnect and this results in lost sound and choppy video.	You will need to turn off the Auto Lock function of your device to ensure continuous video/audio streaming.
Features	How many users can access the Camera at one time?	If you are accessing in Local Mode, two users are supported, after two users all streaming will go through the remote server. This allows for unlimited user access to a single Camera at one time.

10. General Information

If your product is not working properly...

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website: www.motorolahome.com
3. Contact Customer Service at

+44 (0) 844 557 0890(UK only)*

**Calls cost 7p per minute plus your telephone company's access charge*

+44 (0) 8187 62092 (ROI)

Email: support@motorolahome.com

On the Web: www.motorolahome.com/support

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE")

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE OR COUNTRY. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and/or batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

+44 (0) 844 557 0890(UK only)*

**Calls cost 7p per minute plus your telephone company's access charge*

+44 (0) 8187 62092 (ROI)

Email: support@motorolahome.com

On the Web: www.motorolahome.com/support

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorised Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a Warranty card was included in your box, a completed Warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

BINATONE TELECOM PLC

1 Apsley Way London NW2 7HF, United Kingdom.
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877
e-mail: binatoneuk@binatone telecom.co.uk

**EC Declaration of Conformity**

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following products:-

Type of equipment: Digital Video Baby Monitor
Model Name: MBP667CONNECT, MBP667CONNECT-2,
MBP667CONNECT-3, MBP667CONNECT-4

Country of Origin: China
Brand: Motorola

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**. Directive 2011/65/EC on the restriction of use of hazardous substances (RoHS) and 2009/125/EC relating to eco-design requirement for Energy-Related Products (ErP).


Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum:	EN300328 V1.9.1 (2015-02)
EMC:	EN301489-1 V1.9.2 (2011-09); EN301489-17 V2.2.1 (2012-09)
Electrical Safety:	EN60065:2014
RF Safety:	EN62479:2010
LED Safety:	EN62471

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.



Manufacturer / Importer
(Signature of authorized person)

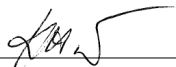

Signature: (K.H.Mueller, CT0)

London, 20 Oct, 2016

Place & Date:

11. Technical Specifications

Wi-Fi® Camera Unit

Frequency	2.4GHz to 2.48 GHz
Image sensor	colour CMOS 1M Pixels
IR LED	6 pcs
Power Adapter	Ten Pao International Ltd. S006AKU0500100 Input 100-240V AC, 50/60Hz, 200mA; Output: 5.0V DC, 1000mA

WARNING

Use only with provided power supply.



motorola

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylised M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Internet Explorer and Windows are trademarks of the Microsoft group of companies. Firefox is a registered trademark of the Mozilla Foundation. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated. Java is a registered trademark of Oracle and/or its affiliates. All other trademarks are the property of their respective owners. © 2017 Motorola Mobility LLC. All rights reserved.



UK_EN Version 1.0
Printed in China