



motorola


# QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

## 1. Setting up your Digital Baby Monitor


MODELS:  
MBP161TIMER  
MBP161TIMER-2

### A. Baby unit power supply

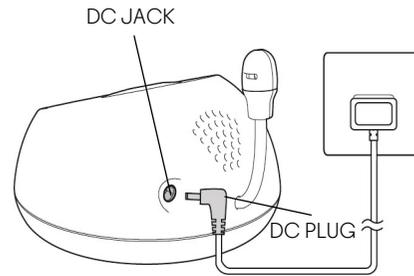

1. Insert the DC plug of the power adapter with the bigger DC plug into the DC jack on the back of the baby unit, as shown.
2. Connect the other end of the power adapter to a suitable electrical outlet.


### B. Parent unit battery installation and power supply

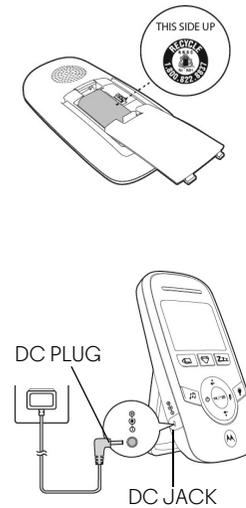

A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be carried to another location without losing the link with the baby unit(s). Charge the parent unit before using it for the first time or when the parent unit indicates that battery is low.

1. Slide off the battery compartment cover.
2. Insert the plug of the rechargeable battery pack into the jack inside the battery compartment.
3. Fit the battery pack into the compartment, with the label **THIS SIDE UP** facing up.
4. Slide the battery compartment cover back until it clicks into place.
5. Insert the DC plug of the power adapter with the smaller DC plug into the DC jack on the side of the parent unit.
6. Connect the other end of the power adapter to a suitable electrical outlet.  
The charging indicator comes on.

### C. Desktop stand on parent unit

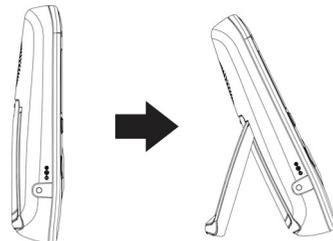

The parent unit comes with a desktop stand attached to the back of the unit. To place the parent unit on a desk, simply pull out the stand, as shown.

#### NOTE

*Place the parent unit on a flat, even surface.*

#### **WARNING:**

Strangulation Hazard. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

## 2. Basic explanation of the display icons

Parent Unit		
	<b>Connection status</b>	<ul style="list-style-type: none"> <li>- Displays when the parent unit is linked to the baby unit.</li> <li>- Flashes when the link between the baby unit and the parent unit is lost or the parent unit is out of range of the baby unit.</li> </ul>
	<b>Battery status</b>	<ul style="list-style-type: none"> <li>-     scrolls when battery is charging.</li> <li>-  displays when battery is fully charged.</li> <li>-  displays when battery is low and needs charging.</li> <li>-  displays when battery is empty and needs charging.</li> </ul>
	<b>Sound Alert</b>	<ul style="list-style-type: none"> <li>- Displays when sound alert is ON.</li> <li>- Flashes when sound alert is triggered.</li> </ul>
	<b>Volume off</b>	<ul style="list-style-type: none"> <li>- Displays when speaker volume is turned off.</li> </ul>
	<b>Nightlight</b>	<ul style="list-style-type: none"> <li>- Displays when nightlight is ON.</li> </ul>
	<b>Lullaby</b>	<ul style="list-style-type: none"> <li>- Displays when lullaby is playing.</li> </ul>

## 3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: [www.motorola.com](http://www.motorola.com)
3. Contact Customer Service:

US and Canada 1-888-331-3383

Email: [support@motorolamonitors.com](mailto:support@motorolamonitors.com)



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2014 Motorola Mobility LLC. All rights reserved.



Printed in China  
US\_EN Version 4.0