



motorola

QUICK START GUIDE

 
For a full explanation of all features and instructions, please refer to the User's Guide.

1. Setting up your Video Baby Monitor

MODELS:


MBP421,
MBP421/2,
MBP421/3,
MBP421/4

A. Baby unit power supply

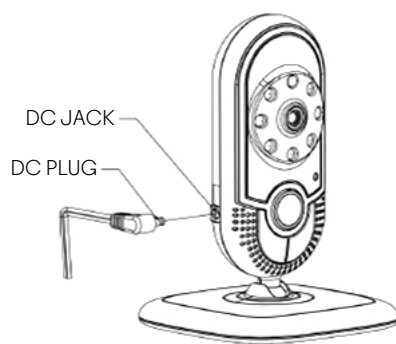

1. Insert the DC plug of the power adapter with the smaller DC plug into the DC jack on the side of the baby unit, as shown.
2. Connect the other end of the power adapter to a suitable mains outlet.
3. Press and hold the Power ON button to turn the Baby Unit on. The Power Indicator turns on steady when it is linked with a Parent Unit or flashes if it has not linked with a Parent Unit.

 B. Parent unit battery installation

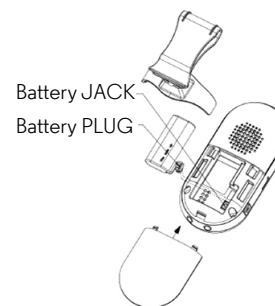

A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be moved without losing the link and picture from the baby unit(s). Charge the parent unit before you use it for the first time or when the parent unit indicates that the battery is low.

 
1. Detach the belt clip/stand.
2. Slide off the battery compartment cover.
3. Insert the plug of the battery pack into the jack inside the battery compartment, and fit the battery pack into the compartment.
4. Replace the battery compartment cover and re-attach the belt clip/stand.
5. Insert the DC plug of the power adapter with the bigger DC plug into the DC jack on the side of the parent unit.
6. Connect the other end of the power adapter to a suitable mains power.
7. The charging indicator comes on.
8. Press and hold the Power ON button to turn the Parent Unit on. The screen shows the picture from a Baby Unit and the Power Indicator turns on steady when it is linked with a Baby Unit. The screen shows an out-of-range symbol, the Power Indicator flashes and the unit beeps if it has not linked with a Baby Unit.



WARNING:

STRANGULATION HAZARD - Keep the unit and adapter cord more than 1 metre from the cot and out of the baby's reach. NEVER place camera or cords within the cot. Secure the cord more than 1 metre away from the baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

C. Belt clip/stand on parent unit

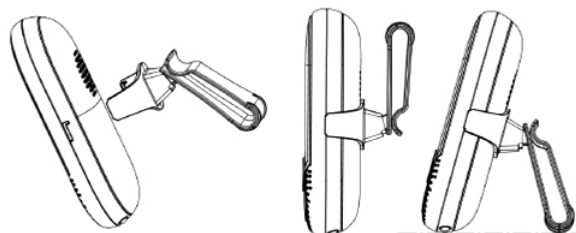

Belt clip position Desktop position




 
 
 
 





 







1. The belt clip/stand attaches to the back of the parent unit and clips into the locking slots on each side.

 NOTE







It will only fit one way, as indicated by UP and the arrows on the inside of the clip.

2. The unit comes with the accessory fitted in the belt clip position.
3. You can convert it into the desktop position, by simply pulling the back part of the clip out slightly and then rotating it by half a turn, as shown in the diagram on the left.

2. Basic explanation of the display icons

Parent Unit		
	Connection status	<p> displays when a strong signal strength is detected between the baby unit and the parent unit.</p> <p>  or  displays when a weaker signal strength is detected between the baby unit and the parent unit.</p> <p> displays when the link between the baby unit and the parent unit is lost.</p> <p> displays when the parent unit is searching for a baby unit.</p>
	Current view status	Displays on the status bar the number of which baby unit is being viewed, from 1 to 4. For a single unit it will be 1.
	Zoom	Menu option to zoom in or out of the image. The icon is displayed on the status bar when the camera on the baby unit is zoomed in.
	Volume off	Displays when the volume is turned off.
	Sound activation	Menu option to turn the sound activation on or off. With sound activation ON, the icon is displayed on the status bar, and the display will turn off after a short time if no sound is detected by the baby unit. When a sound is detected, the video screen will turn back on automatically.
	Battery status	<p> scrolls when the battery is charging.</p> <p> displays when the battery is fully charged.</p> <p> displays when the battery is low and needs charging.</p> <p> displays when operating on AC power only, if no battery is installed or the battery has been installed incorrectly.</p>
	Camera selection	Menu option to select which baby unit displays its image on the screen, or view all baby units in Scan Mode.
	Brightness	Menu option to change the brightness of the screen.
	Sensitivity	Menu option to change the sound sensitivity level of the baby unit. With sound activation turned on, the monitor will turn off if the sound detected at the baby unit falls below the set level, and automatically turn back on when it exceeds the set level.
	Pairing	Menu option to add or replace baby units (purchased separately) to your baby monitor system. Up to 4 baby units can be used with a parent unit. (Important Note: The supplied baby unit(s) and parent unit are already paired.)

3. Basic key operations

Parent Unit		
	On/Off button	Press and hold to switch the unit on or off.
	Menu/OK button	Press to open menu options and confirm changes.
	Up/Down buttons	In monitor mode, press to increase/decrease the speaker volume. In menu mode, press to move up/down the options. While viewing a zoomed image, press and hold to pan up/down.
	Left/Right buttons	In menu mode, press to select the option settings. In monitor mode, press to zoom out/in. While viewing a zoomed image, press and hold to pan left/right.
Baby unit		
	On/Off button	Press and hold to switch the unit on or off.
	Pairing button	Press and hold to set the unit into pairing mode.

4. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:

UK 0844 557 0890

ROI 08187 62092



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2014 Motorola Mobility LLC. All rights reserved.

Printed in China

Version 5.0