



motorola

 
# QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

## 1. Setting up your Digital Video Baby Monitor


MODELS:  
MBP35S,  
MBP35S-2,  
MBP35S-3,  
MBP35S-4

### A. Connecting the power supply for the Baby Unit

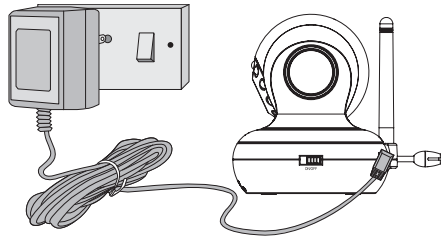


Connect the small plug of the power adapter to the Baby Unit and the other end to a suitable mains power socket.  
Only use the enclosed adapter (5V DC/1000mA). Ensure the ON/OFF switch is switched to the "ON" position.

### B. Installing the battery pack for the Parent Unit

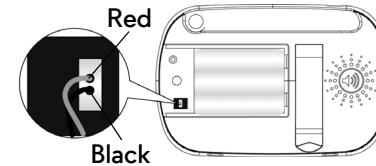 


The rechargeable battery pack supplied should be installed so that the parent unit can be moved without losing the link and picture from the camera unit(s). Charge the battery in the parent unit before you use it for the first time or when the parent unit indicates the battery is low. Insert the wire tab of the rechargeable battery pack into the contact slot as shown and fit the battery pack into the compartment.

### C. Fastening the cover for the Parent Unit

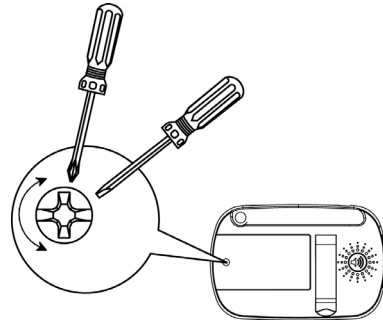 

Place the battery compartment cover over the battery, making sure the battery wires are carefully pushed down and the cover fits properly.  
Use a small cross-head or flat-end screwdriver to tighten the screw and secure the cover, as shown.

### D. Connecting the power supply for the Parent Unit

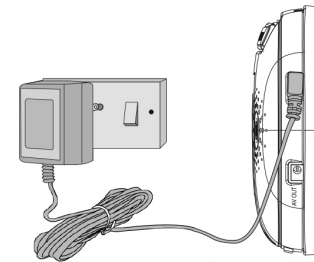 







Connect the small plug of the power adapter to the parent unit and the other end to a suitable mains power socket. Only use the enclosed adapter (5V DC / 600mA). Recommend charging at least 12 hours before first use.



### WARNING:

Strangulation Hazard. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1m away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

## 2. Basic operation of the keys

Parent Unit		
	<b>POWER ON/OFF button</b>	Press and hold to switch on/off the Unit.
	<b>UP/DOWN buttons</b>	Press to tilt the camera upward or downward. Press to adjust menu option settings.
	<b>LEFT/RIGHT buttons</b>	Press to pan the camera left or right. Press to access different menu options.
	<b>MENU button</b>	Press to open menu options or exit from the menu.
<b>OK</b>	<b>OK button</b>	Press to confirm a selection.
	<b>VIDEO button</b>	Press to turn on/off the LCD display.
	<b>TALK button</b>	Press and hold to talk to your baby.
Baby Unit		
<b>ON/OFF switch</b>		Slide the power switch forward to switch on the Unit. Slide the power switch back to switch off the Unit.

## 3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:  
UK 0844 557 0890  
ROI 08187 62092



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylised M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.



Printed in China  
UK\_EN Version 4.0