
 
 






2 Basic operation of the keys

Parent unit		
	ON/OFF button	Press and hold to switch on/off the unit.
	UP/DOWN buttons	Press to adjust sound volume up or down. Press to adjust menu up or down setting.
	LEFT/RIGHT buttons	Press to adjust brightness up or down. Press to adjust menu left or right setting.
	MENU button	Press to open menu options or exit.
	OK button	Press to confirm a selection.
	VIDEO button	Press to turn on/off the LCD display.
	TALK button	Press and hold to talk to your baby.
Baby unit		
ON/OFF switch	Push power switch to the right to switch on the unit. Push power switch to the left to switch off the unit.	

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service:
US and Canada 1-888-331-3383



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2013 Motorola Mobility LLC. All rights reserved.

Printed in China
Version 4.0

