
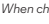 




Models: C1011LX, C1012LX, C1013LX and C1014LX

IMPORTANT
Warning! Use only the approved rechargeable Ni-MH battery pack (AAA 2.4v 300mAh Ni-MH rechargeable battery) supplied with your C101xLX.

BATTERY LOW WARNING
If  icon flashes on the display and you hear a warning beep every 2 minutes during a call, you will need to recharge the handset before you can resume use.

When charging,  icon will scroll on the display.

BATTERY PERFORMANCE
In ideal conditions, a fully charged battery should give up to 10 hours of talk time or up to 200 hours standby time on a single charge.¹

Note that new batteries do not reach their full capacity until it has been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries down at least one time per week will help them last as long as possible.

The charge capacity of the rechargeable battery will reduce with time as it wears out, giving the handset less talk / standby time. Eventually it will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. The battery and handset may become warm during charging. This is normal.

¹All talk and standby times are approximate and depend on features selected and usage pattern.

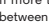 
Date and time


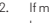 
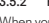 

If you have subscribed to a Caller ID Service and the Auto Clock is set to on, the date and time will set automatically for all handsets when you receive your first call.

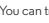 
If you do not have a Caller ID service, you can set the date and time manually, see section "5.3. Date and Time".


Your C101xLX is now ready for use.

3.5 Intercom

3.5.1 Make an internal call
If more than one handset is registered to the base, internal calls can be made between two handsets.  icon flashes and the display shows the handset number you are calling.



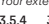 
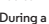 
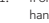 
- If only 2 handsets are registered to the base, press  and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold  and scroll  to the handset that is to be called and press .

3.5.2 Receive an internal call
When you receive an internal call,  icon flashes and the handset number that is calling you is displayed.

- Press  to make an internal call.

3.5.3 Transfer a call
You can transfer an external call to another handset registered to the base.


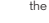 


During an external call:

- If only 2 handsets are registered to the base, press and hold  and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold  and scroll  to the handset that is to be called and press .
- When the other handset answers, press  to complete the transfer.

NOTE
Your external call resumes automatically after 1 minute if there is no answer.

3.5.4 3-way conference call
You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

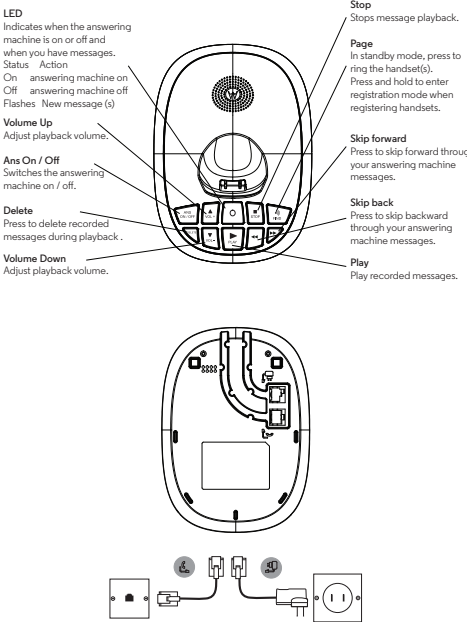 
- If only 2 handsets are registered to the base, press and hold  and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold  and scroll  to the handset that is to join the call and press .
- When the other handset answers, press to connect all three callers to begin the conference call.
- Press to end the call.



Manufactured, distributed or sold by Binatone Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.
Version 18(EN-US)

2. Getting to know your phone

Overview of your base



Welcome...

to your new Motorola C101xLX Digital Cordless Telephone with Answering machine!

- Answering machine up to 12 minutes digital recording time.
- All handsets are completely cordless and easy to locate with paging system.
- Bright backlit display.
- Speakerphone for hands-free conversations.
- 50 Name and Number phonebook.
- Caller ID shows you who's calling and shows the details of the last 20 callers in a Calls list.¹
- Redial up to 10 of the last numbers called.
- Register up to 4 handsets to a single base.
- Make internal calls and transfer external calls between handsets.
- Choose from 10 different ringtones.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

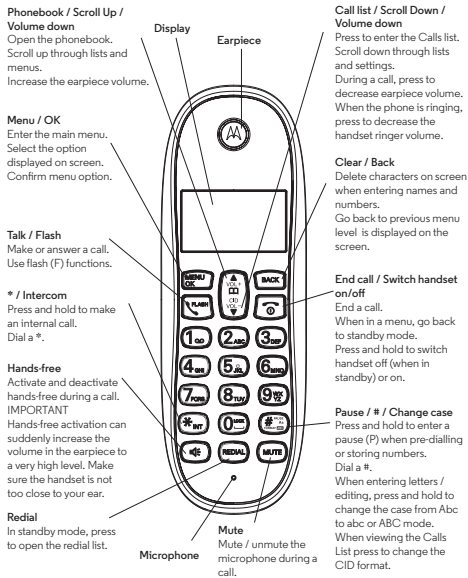 
Need help?

If you have any problems setting up or your using your C101xLX Digital Cordless Telephone with Answering Machine, please contact Customer Service at 1-888-331-3383. Alternatively, you may find the answer in the 'Help' section at the back of this guide.

¹You must subscribe to your network provider's Caller ID service for this feature to work. A subscription fee may apply.


 
 
 
 
Please note that this equipment is not designed for making emergency telephone calls when power fails. Alternative arrangements should be made for access to emergency services.

Overview of your handset



Handset display

3.7.4 Delete the entire Redial list



- Press  to open the Redial list.
- Press . Scroll  to Delete all. The display shows Confirm?.
- Press  to confirm or  to cancel.

3.8 Lock / unlock the keypad
You can lock the keypad so that it cannot be operated accidentally while carrying it around.

NOTE
When the keypad is locked, you can still answer incoming calls and operate the handset normally during a call. When the call ends, the keypad lock resumes in place.

- Press and hold .
- To unlock the keypad, press and hold  again.

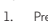 
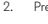 

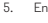 

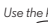 
3.9 Paging / Find handset
Paging is a useful way to find lost handsets.


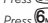 

- Press  on the base. All handsets ring.
- Press  again to cancel the paging call or press any key on the handset to stop the paging call.

4. Phonebook

The C101xLX handset phonebook can store up to 50 names and numbers. Names can be up to 14 characters long and numbers up to 24 digits.

4.1 Store a name and number

- Press . Phonebook is displayed.
- Press . New Entry is displayed.
- Press . Enter Name is displayed.
- Enter a name and press .
- Enter a number. Press  to save.
- Press  to return to standby.

ENTERING NAMES
Use the keypad letters to enter names, e.g. to store TOM:
Press  once to enter T.
Press  three times to enter O.
Press  once to enter M.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT
Only use the telephone line cord and power adapter supplied.

Got everything?






 









- C101xLX base & cordless handset
- 1 x rechargeable Ni-MH battery pack
- Power adapter for the base
- Telephone line cord
- User Guide
- Quick Start Guide

If you have purchased a C101xLX multiple pack you will also have the following items:


 


- Cordless handset & charger
- Rechargeable Ni-MH battery pack
- Power adapter for the charger
- Telephone line cord

Handset display




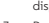 
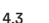 

Display icons

	Indicates signal strength.
	Flashes when the handset is not registered to the base or if you are out of range. Indicates a missed call.
	Steady when making an outgoing call. Flashes to indicate an incoming or internal call.
	Indicates an incoming call when viewing the calls list.
	Indicates an outgoing call when viewing the calls list.
	Hands-free is on.
	Handset ringer is off.
	Answering machine is on.
	Indicates new voicemail messages received. ¹ Off when there is no voicemail messages.
	Indicates you can scroll through a list or adjust the volume in talk mode.
	Indicates more text after the displayed information.
	Battery is fully charged.
	Battery is partially charged.
	Battery is running low.
	Flashes when battery is almost fully discharged.








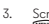 


WRITING TIPS

Press  to delete the last character or digit.
Press  or  to move between characters.
Press  to insert a space.









4.2 View or dial an entry

- Press .
- Scroll  or  to the entry you want.
OR
Enter the first letter of the name to search alphabetically.
The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll  or  to the entry you want.
- To unlock the keypad, press and hold  to return to standby.





4.3 Edit a name and number

- Press  twice. The display shows View.
- Scroll  to Edit and press .
- Scroll  or  to the entry you want to edit, or search alphabetically and press . The existing name is displayed.
- Press  to delete the name if required, then enter the new name and press . The existing number is displayed.
- Press  to delete the number if required, then enter the new number and press  to save.

4.4 Delete an entry

- Press  twice. The display shows View.
- Scroll  to Delete and press .
- Scroll  or  to the entry you want to delete, or search alphabetically and press . The display shows Confirm?.
- Press  to confirm or  to cancel.

4.5 Delete all entries

- Press  twice. The display shows View.
- Scroll  to Delete all and press .
- The display shows Confirm?.
- Press  to confirm or to cancel.


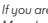 
1. Getting started

IMPORTANT
Do not place your C101xLX in the bathroom or other humid areas.

Location
You need to place your C101xLX base within 6 feet of an electrical outlet and a telephone wall socket to provide the power to supply the device and to connect to telephone service.


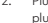 
Make sure it is at least 3 feet away from other electrical appliances to avoid interference. Your C101xLX works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Putting it as high as possible ensures the best signal.

HANDSET RANGE
The unit has a range of up to 650 feet outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 100 feet. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH
The  icon on your handset indicates that you are within range of the base. When out of range of the base, the  icon disappears. If you are on a call, you will hear a warning beep. If you are on a call, the line will hang up if the handset moves out of range of the base. Move back within range. The handset will automatically re-connect to the base.

Setting up
IMPORTANT
Use only the power adapter and telephone line cord supplied with the product.

Connecting the base

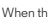 



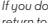 

- Plug the telephone line cord into the socket marked  on the rear of the base.
- Plug the power adapter into the socket marked  on the rear of the base and plug the other end into the electrical outlet.

¹This feature is dependent on your Network Service provider supporting the service. A subscription fee may be applicable.

Navigating the menus

Each menu has a list of options, which can be seen in detail on the menu map on the below list.

When the handset is switched on and in standby mode:

- Press  to open the main menu.
- Then use  or  buttons to scroll through the available options.
- Press  to select an option. To return to the previous menu level, press . To exit the menu and return to standby, press .

NOTE
If you do not press a button on the handset for 30 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.


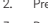 


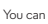 

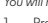 

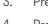 
Menu map		
Phonebook	Battery tone	Reset
View	Phone name	Ans. Machine
Add new	Date & time	Play
Edit	Language	Delete all
Delete ¹	Services	Announcement
Delete all ¹	Call list type	Voice answer
Phone setup	Area code	Ring delay
Sounds	Flash time	Remote access
Ring volume	Dial mode	Voice Language
Ring tones	Auto clock	
Key tone	Register	
Docking tone	Unregister	

¹Only available when an phonebook entry is already stored.

5. Personal settings

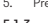 
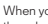 

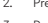 

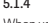 
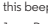 


5.1 Sounds

5.1.1 Ring volume
You can adjust the ringer volume and set different volume levels. Choose from 5 volume levels or Off.


- Press  scroll  to Phone setup.
- Press . The display shows Sounds.
- Press . The display shows Ring volume.
- Press  scroll  or  to select the volume (1-5 or OFF).
- Press  to confirm or  to return to the previous menu.

5.1.2 Ringer tones
You can set different ringer tones for your internal and external calls. Choose from 10 different ringer tones.

NOTE
You will hear a sample ring as you scroll to each ring tone.

- Press  scroll  to Phone setup.
- Press . The display shows Sounds.
- Press  scroll  to Ringer tones.
- Press  scroll  or  to select the tone (1-10).
- Press  to confirm or to return to the previous menu.

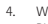 
5.1.3 Keytones on/off
When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

- Press  scroll to Phone setup.
- Press . The display shows Sounds.
- Press scroll to Key tone.
- Press scroll or to select On or Off and press to confirm.

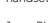 
5.1.4 Docking tone on/off
When you replace the handset in the base you will hear a double beep. You can switch this beep on or off.

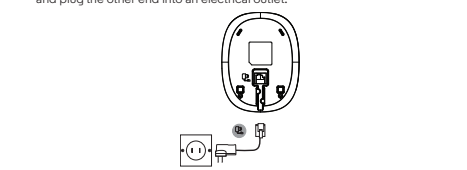 
- Press scroll to Phone setup.
- Press . The display shows Sounds.
- Press scroll to Docking tone.
- Press scroll or to select the required language and press to confirm.


Charging the handset

- If you are charging the battery for the first time, place the handset on the base to charge for at least 24 hours continuously.
- When the handset is fully charged,  icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multi-pack only)
If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

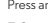 
- Plug the power adapter into the socket marked  on the rear of the charger and plug the other end into an electrical outlet.



- If you are charging the battery for the first time, place the handset on the charger to charge for at least 24 hours continuously.
- When the handset is fully charged,  icon will appear steady on the display. The display will show Handset and handset number (e.g. 2) to indicate that it is registered to the base.

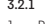 
3. Using the phone

NOTE
Your handset will automatically time the duration of all external calls. The call timer will display after the first 10 seconds of your call. When the call ends, the total duration of your talk time is shown for 3 seconds.


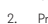 
3.1 Switch the handset on / off
Press and hold  to switch the handset on or off.


3.2 Calls


3.2.1 Make a call

 
- Press .
- Dialing a telephone number.


 
3.2.2 Pre-dial

- Use the keypad to dial a number, if you make a mistake press  to delete the last digit.
- Press  to dial.


 
3.2.3 End a call
Press  or place the handset back on the base or charger.


 
 

 
 
3.2.4 Answer a call
When you receive an external call, the phone rings and  icon flashes on the display.

- Press  to answer the call.


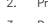 
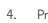 
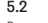 

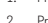 


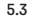 
3.3 Adjust the earpiece volume
During a call, press  or  to increase or decrease the volume. There are 5 levels to choose from.

3.4 Mute
You can mute your handset so that you can talk to someone nearby without your caller hearing.



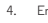 
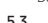 
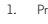 
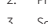 
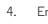 
- During a call, press . The display shows Mute on and your caller cannot hear you.
- Press  again to resume your call.

- Press  scroll  to Docking tone.
- Press  scroll  or  to select On or Off and press  to confirm.

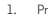 
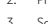 
5.1.5 Battery tones
When the battery is running low you will hear a warning beep. You can switch this beep on or off.

- Press  scroll  to Phone setup.
- Press . The display shows Sounds.
- Press  scroll  to Battery tone.
- Press  scroll  or  to select On or Off and press  to confirm.

5.2 Handset name
Personalize your handset, with a name or location for example Peter or Bedroom. Maximum 12 characters.



- Press  scroll  to Phone setup.
- Press . The display shows Sounds.
- Scroll  to Phone name and press .
- Enter the new handset name and press  to confirm. Delete the current name by pressing .








5.3 Date & time

- Press  scroll  to Phone setup.
- Press

6. Services







6.1 Call list type

You can set the Call list to show All calls or Missed calls only. If All calls is selected, press  key in idle and you can view all calls lists. If Missed calls is selected, press  key in idle and you can view missed call only.

- Press , scroll  to **Services** and press .
- The display shows **Call list type**, press .
- Scroll  or  to select **All calls** or **Missed calls** and press  to confirm.









6.2 Area code

You can set your local area code into the phone. When a number from that area code calls only the local number will be displayed and stored. The area code can be up to 3 digits long.

- Press , scroll  to **Services** and press .
- Scroll  to **Area code** is displayed. Press .
- Using the keypad enter the area code and press  to confirm.









6.3 Flash time

Depending on your country and network operator, your C101xLX has the flash time set as 600 ms (Long). It is unlikely that you need to change this setting unless advised to do so,








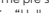 
- Press , scroll  to **Services** and press .
- Scroll  to **Flash time** and press .
- Press  or  to select **Short**, **Medium** or **Long** and press  to confirm.

6.4 Dial mode

The default C101xLX dialling mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

- Press , scroll  to **Services** and press .
- Scroll  to **Dial mode** and press .
- Press  or  to select **Tone** or **Pulse** and press  to confirm.

8.4 Delete all messages

- Press , scroll  or  to **Answ. Machine** and press .
- Scroll  or  to **Delete all** and press .
- Dispalys shows **Confirm?** press .

8.5 Outgoing messages (OGMs)

This is the message your callers hear when the answering machine answers the call. There are two pre-recorded outgoing messages, or you can record your own.










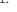 



8.5.1 Record also

The pre-set Record also outgoing message, allows your caller to leave a message, ie: "Hello, your call cannot be taken at the moment, please leave your message after the tone'.









8.5.2 Answer only

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is "Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later."

8.5.3 Record, play or delete your own outgoing message

- Press , scroll  to **Answ. Machine** and press .
- Scroll  to **Announcement** and press .
- Press  or  to select either **Answer only** or **Record also** and press .
- Scroll  or  to select either **Play**, **Record** or **Use default** and press .
- If you select **Play** the current OGM will play back.
If you select **Record** once you here the beep speak your message into the handset, to end recording press . The message will automatically play back.
If you selected **Use default** the display shows **Confirm?**, press  to confirm.

8.5.4 Select the OGM

- Press , scroll  to **Answ. Machine** and press .
- Scroll  to **Voice answer** and press .
- Press  or  to select either **Answer only**, **Record also** and press  to confirm.

NOTE

If the answering machine is turned off and then turned on via the base unit the settings will be the same as when it was last switched on.

- Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case of a power outage.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

CAUTION

To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 8 inches from nearby persons.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

Consumer Products and Accessories

Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

BINATONE extends only to the first consumer purchaser, and is not transferable.

SAVE THESE INSTRUCTIONS

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not







conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING

6.5 Switch Auto clock on / off

If you have subscribed to a Caller ID Service, the date and time will be set on all your handsets whenever a call is received. This feature can be set to On or Off.

- Press , scroll to **Services** and press .
- Scroll  to **Auto clock** and press .
- Scroll  to **On** or **Off** then press  to confirm.


6.6 Registration

Up to 4 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them,








- The instructions described below apply specifically to your C101xLX handset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.
- The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

6.6.1 Register a handset

At the base:










- Press and hold the  on the base until the base beeps. You have 120 seconds in which to register a handset.

At the handset:

- If the handset is not already registered to a base, press .
- Or if the handset is already registered to a base, press  scroll  to **Services** and press . Scroll  to **Register** and press .
- When the display shows **PIN**, enter the base PIN and press . When the handset registers with the base, it is assigned a handset number.

6.6.2 Un-Register a handset







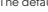 
Use one handset to delete another. You cannot delete the handset that you are using.

- Press , scroll  to **Services** and press .
- Scroll  to **Unregister** and press .
- Enter the 4 digit master PIN and press . Display shows the first registered handset number.
- Scroll  or  to select the handset you want to delete and press . **Unregistered** is displayed on the handset screen.

8.6 Ring delay

Select the duration of rings before your answering machine picks up the call. Choose from 3-8 Rings or In Toll Saver mode:

- If you have new messages your phone answers after 3 Rings.
- If there are no new messages it will answer after 5 Rings. So you have the option to hang up, saving the time and cost of a call.
- If the memory is full, it will automatically revert to Answer Only mode.

- Press , scroll to  **Answ. Machine** and press .
- Scroll to **Ring delay** and press . The handset will display the current setting.
- Use  or  to select the number of rings required and press  to confirm.

8.7 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your C101xLX from another phone.

The default setting is **Activated**.

- Call your C101xLX . When you hear your outgoing message, press #.
- Enter your 4 digit PIN. The default code is 0000.
-You hear a confirmation beep.

NOTE

Change this code for increased security, see "PIN" on page 33.

- After entering your PIN as stated above, use the keypad to operate your C101xLX answering machine.

Play messages	2
Play previous message	1
Play next message	3
Delete message playing	6
Switch answering machine ON	7
Stop playback	8
Switch answering machine OFF	9







6.7 Restore default settings

You can restore your C101xLX to its default (original) settings.

All the handsets that are registered to the base will be retained.

IMPORTANT

Resetting your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press , scroll  to **Services** and press .
- Scroll  to **Reset** and press .
- Confirm? is displayed. Press .

6.8 Default settings

Handset name	HANDSET	Redial list	Empty
Low battery beeps	ON	PIN code	0000
Docking tone	ON	Dial mode	Tone
Key tone	ON	Flash mode	Long (600 ms)
Ringer tones	1	Keypad lock	OFF
Ringer volume	3	Answer machine	On
Earpiece volume	1	Answer mode	Record also
Phonebook	Empty	Ring delay	5
Calls list	Empty		

7. Caller ID and the Calls list

IMPORTANT













To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be applicable.

To ensure that the caller's name is displayed, make sure you have stored the full telephone number, including the area code in the phonebook.

Note: If the area code is stored in the phone it will not display the full phone number.


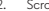 






If the call is blocked, **Private** will be displayed.
If the number is unavailable, **Unknown** will be displayed.
If the call is from the operator, **Operator** will be displayed.
If the call is from a payphone, **Payphone** will be displayed.
If the call is from a ringback request, **Ringback** will be displayed.

8.8 Remote access on/off and change remote PIN

- Press , scroll  or  to **Answ. Machine** and press .
- Scroll  to **Remote access** and press .
- Scroll  or  to select **Activated**, **Deactivated** or **Change PIN**.
- Press  to confirm.
If you choose **Change PIN** enter the old PIN and press .
- Enter the new PIN and press .
- Re-enter the new PIN.
- Press  to confirm.

8.9 Answering machine language

You can change the answering machine voice prompts and default OGM language.

- Press , scroll  to **Answ. Machine** and press .
- Scroll  to **Voice language** and press .
- Scroll  or  to the required language and press .

7.1 Caller ID

If you have subscribed to a Caller ID Service, you will be able to see your caller's number on your handset (provided it is not withheld) prior to answering the call. The display can show the first 16 digits or 14 characters of the phone numbers.



If your caller's name and number are stored in the phonebook and a number match is found, you will see the caller's name on the display as well.

7.2 Calls list











The Calls list stores details of your last 50 received calls, including the phone number, date and time of call.

The Calls list also alerts you when you have unanswered calls.


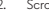 


The caller's details are stored in the Calls list whether or not you have answered the call. The list is shared by all handsets registered to the base. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

When you have missed call(s) (incoming calls that you haven't answered) the display will show **X Missed call(s)** and the  icon will flash on all handsets registered to the base. Press  to see the callers details.

7.2.1 View the Calls list

- Press  to open the Calls list. If there are no calls in the list, the display shows **List empty**.
 - The most recent number or name if stored in the phonebook is displayed.
- Press  or  to scroll through the list.
 - If the call was answered,  icon is displayed as you scroll to the entry. If the call was unanswered,  icon is displayed as you scroll to the entry.
 - If the telephone number is longer than 16 digits,  icon is displayed. Press  to see the remaining digits.
 - Press  to access the option to store the entry in your phonebook.
 - Press  twice to see the time and date of the call.
- When viewing a calls list number press  to toggle the Calls List between different formats, e.g. YYYYYYYY, AAAA-YYYYYYYY or 1-AAA-YYYYYYYY.

7.2.2 Dial a number in the Calls list

- Press  to open the Calls list.
- Scroll  or  to the entry you want.
- Press  to dial the displayed entry.

9. Help

The  icon is not scrolling during charge

- Bad battery contact – move the handset slightly.
- Dirty contact – Clean the battery contact with a cloth moistened with alcohol.
- Battery is full – no need to charge.

No dialling tone

- No power – check the connections. Reset the phone: unplug and plug back in the electrical outlet.
- Batteries are empty – charge the batteries for at least 24 hours.
- You are too far from the base – move closer to the base.
- Wrong line cable – use the line cable provided.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal doorframes – move the base at least 3 feet away from any electrical appliances.

The  icon is blinking or has disappeared

- Handset is not registered to the base – register the handset to the base.
- You are too far from the base – move closer to the base.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID service does not work

- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the batteries.
- Try disconnecting and connecting the base power supply.
- If the LED is not lit up, then try disconnecting and connecting the base power supply.

Unable to register another handset

- Maximum number of 4 handsets has been reached.
- The display shows **Searching**. You must unregister a handset in order to register a new one.

correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

7.2.3 Save a number from a Calls list number to the phonebook

- Press