



motorola

Digital Cordless Phone with Answering Machine



User's Guide

Models: P1001, P1002, P1003, P1004, P1005

Warning

Use only the adapter and telephone line cord provided in the box.

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Phone!

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

US and Canada 1-888-331-3383
Email: support@motorolahome.com

- 30 name and number phonebook.
 - Answering machine with up to 15 minutes digital recording time.*
 - Caller ID shows you who is calling and includes details of the last 30 callers in a calls list.**
 - Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.
- * The recording time includes the pre-recorded voice menu and outgoing announcements.
- ** You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work.

Please note that this equipment is not designed for making emergency telephone calls when the power fails.

Alternative arrangements should be made if emergency telephone call is necessary.

This User's Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

This equipment is not designed to make emergency telephone calls during power failures. Alternative arrangements should be made for access to emergency services.

Got everything?

- Handset
- Base
- Ni-MH Rechargeable Battery Pack
- Handset Back Cover
- Wall-mount Bracket
- Power Adapter
- Telephone Line Cord
- Quick Start Guide

In multi-handset packs, you will find one or more additional handsets, chargers with power adapter units, additional rechargeable battery packs and battery doors.

1. Getting started	6
1.1 Connecting the base	7
1.2 Wall mounting on the base	7
1.3 Installing and charging the handset battery pack	8
1.4 Setting the display language	9
1.5 Setting the date and time	9
2. Getting to know your phone	10
3. Using the Phone.....	15
3.1 Making a call.....	15
3.2 Speed dialing	15
3.3 Answering a call	15
3.4 Ending a call	15
3.5 Adjusting volume	15
3.6 Muting a call	15
3.7 Dialing from the redial list	15
3.8 Dialing from the calls list	15
3.9 Adding an entry to the phonebook	15
3.10 Storing a phonebook entry as a one touch number	16
3.11 Dialing from the phonebook	16
3.12 Caller ID.....	16
3.12.1 Calls List	16
3.12.2 Viewing the calls list	17
3.12.3 Saving a number from the calls list to the phonebook	17
3.12.4 Deleting a calls list entry	17
3.12.5 Deleting the entire calls list	17
3.13 Personal Settings.....	18
3.14 Intercom	19
3.14.1 Calling another handset	19
3.14.2 Transferring a call to another handset	19
3.14.3 Three-party conference call	20
3.15 Setting the dial mode	20
3.16 Setting the flash time.....	20
3.17 Setting the area code.....	20
3.18 Registration	21
3.19 Resetting all settings	21
3.20 Paging/Finding a handset	21
3.21 Using your answering machine	21
3.21.1 Playing messages	21
3.21.2 Turning on or off the answering machine	22
3.21.3 Setting the announcement mode	22
3.21.4 Setting the number of rings	22
3.21.5 Announcement	23
3.21.6 Recording a memo	23

3.21.7	Call screening on/off	24
3.21.8	Deleting all old messages	24
3.21.9	Remote access	24
3.21.10	Setting the security code	25
4.	Help	26
5.	General information.....	27

1. Getting started

WARNING

Do not place your phone in the bathroom or other humid areas.

Location

When choosing a location for your new phone, here are some important guidelines you should consider:

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

HANDSET RANGE

Optimal range is reached when there are no other electrical appliances working within the range area. Any obstruction between the base and handset will also reduce the range significantly.

SIGNAL STRENGTH

When out of range of the corded base, the screen shows OUT OF RANGE. If you are on a call, the line will hang up. Move back within in range. The cordless handset will automatically re-connect to the corded base.

Setting up

 
IMPORTANT

The base must be plugged into an electrical outlet at all times. Do not connect the telephone line cord into the telephone wall jack until the handset is fully charged. Only use the adapter and telephone line cord supplied with the product.

WHICH POWER ADAPTER?

The power adapter with the smaller pin is for the base unit and the power adapter with the bigger pin is for the charger unit (only for multi-handset packs).


1.1 Connecting the base

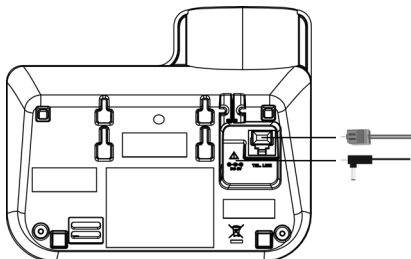

1. Plug the power adapter and the telephone line cord into the base. The power adapter with the bigger pin is for the charger (only in multi-handset packs).
2. Plug the other end of the power adapter into a power outlet and the telephone line cord into a telephone wall jack.
3. Use only the provided power adapter.

1.2 Wall mounting on the base

 This phone can be mounted on any standard wall plate.

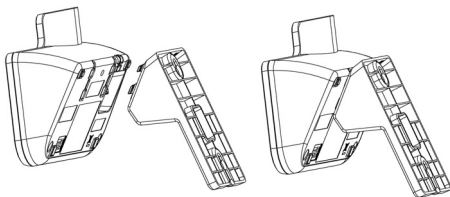


1. Plug the power adapter with smaller pin plug and the telephone line cord into the base.
2. Snap the wall-mount bracket into the notches on the back of base, as shown.
3. Plug the other end of the power adapter into a power outlet and the telephone line cord into a telephone wall jack.
4. Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

NOTE


DO NOT use a power outlet controlled by a wall switch.


Make sure the wall is capable of supporting the weight of the phone, and use the proper type of anchoring device for the wall material.

 1.3 Installing and charging the handset battery pack

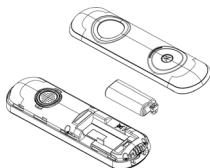

 1. Take off the battery compartment cover to remove it. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.

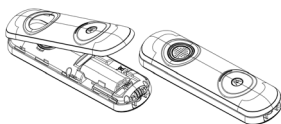

2. Install the battery compartment cover back on.
3. Put the handset on the base to charge for at least 24 hours. Once charged, the  will indicate that the handset is fully charged.



IMPORTANT

Use only the rechargeable battery pack provided with the product.

1.4 Setting the display language

1. Press **MENU** then **VOL+** or **REDIAL/VOL-** to select **SETUP HS**.
2. Press **MENU** then **VOL+** or **REDIAL/VOL-** to select **LANGUAGE**.
3. Press **MENU** then **VOL+** or **REDIAL/VOL-** to select the desired language.
4. Press **MENU** to save.

 
1.5 Setting the date and time

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **DATE&TIME**. If you're a subscriber to your network's Caller ID service, the date and time is automatically set when a call is received.
2. Press **MENU** and then use the keypad to enter the year and the date
Alternatively, press **VOL+** or **REDIAL/VOL-** or  or **CID** key to move the cursor to the target input field.
3. Press **MENU** and then use the keypad to edit the time in 12 HR format. Press **VOL+** or **REDIAL/VOL-** to toggle **AM/PM** settings. Press  or **CID** to move the cursor to the target input field.
4. Press **MENU** to save the settings.

Your phone is now ready for use.

2. Getting to know your phone

Overview of your cordless handset

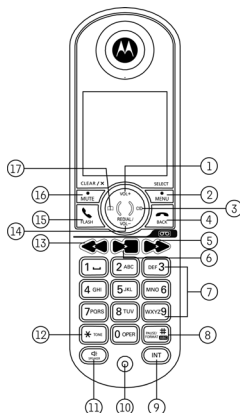

1 SCROLL UP / VOLUME UP

- a) **In menu mode:** Press to scroll up.
- b) **In editing mode:** Press to move cursor to the left.
- c) **During a call:** Press to increase volume.
- d) **Calls list / phonebook / redial list entry:** Press to scroll up the list.
- e) **In answering machine mode:** Press to increase volume.

2 MENU / SELECT

- a) **In idle mode:** Press to access menu list.
- b) **In menu / editing mode:** Press to confirm and save the settings.
- c) **During a call:** Press to transfer the call to another handset.
- d) **In calls list entry:** Press to save the entry to the phonebook.
- e) **In phonebook entry:** Press to go to phonebook editing mode.

3 RIGHT / CALLS LIST

- a) **In idle mode / during a call:** Press to access calls list.
- b) **In editing mode:** Press to move the cursor to the right.

4 TALK OFF / BACK

- a) **In menu / editing mode:** Press to exit to previous level.
- b) **In pre-dial mode / phonebook / calls list / redial list entry / answering machine mode:** Press to exit to idle.
- c) **During a call:** Press to end a call.

5 SKIP FORWARD

- a) **During message playback:** Press skip to play the next message.

6 PLAY / STOP

- a) **In idle mode:** Press to play the messages via speakerphone.
- b) **During message playback:** Press to stop playing messages.

7 ALPHANUMERIC KEYPAD

- a) **In idle / pre-dial / editing mode / during a call:** Press to enter characters / numbers.
- b) **In idle mode:** Long press to activate speed dial.

8 # / PAUSE / ABC / FORMAT

- a) **In idle / pre-dial / number editing mode / during a call mode:** Press to insert a "#", press and hold to insert a pause (P).
- b) **In name editing mode:** Toggle ABC / abc.
- c) **In calls list entry:** Press to toggle Caller ID display format between 7, 8, 10 and 11 digits.
- d) **In Calls List / Phonebook / Redial list entry:** If the number is more than 15 digits, press to review the remaining digits in the next screen page.

9 INTERCOM

- a) **In idle mode / during a call:** Press to initiate an intercom call.

10 MICROPHONE

11 SPEAKER

- a) **In idle / menu / pre-dial mode / during a call:** Press to turn on / off the speakerphone.
- b) **Calls List / phonebook / redial list entry:** Press to make a call with speakerphone.
- c) **During ringing:** Press to answer a call with speakerphone.
- d) **In answering machine mode:** Press to toggle the message playback via earpiece / speakerphone.

12 * / TONE

- a) **In idle / pre-dial / editing mode:** Press to insert a *.
- b) **During a call:** Press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call has ended, the dial mode will change back to pulse.
- c) **In Calls List / Phonebook / Redial list entry:** If the number is more than 15 digits, press to review the remaining digits in the previous screen page.

13 SKIP BACKWARD

- a) **During message playback:** Press once to repeat the current message from the beginning. Press twice to playback the previous message.

14 SCROLL DOWN / VOLUME DOWN / REDIAL LIST

- a) **In idle mode:** Press to access redial list.
- b) **In menu mode:** Press to scroll down.
- c) **In editing mode:** Press to move cursor to the right.
- d) **During a call:** Press to decrease volume.
- e) **Calls list / phonebook / redial list entry:** Press to scroll down the list.
- f) **In answering machine mode:** Press to decrease volume.

15 TALK ON / FLASH

- a) **In idle / menu / pre-dial mode:** Press to make a call.
- b) **Calls List / phonebook / redial list entry:** Press to make a call to the selected entry.
- c) **During a call:** Press to switch another call.
- d) **During an incoming call:** Press to answer a call.

 
16 MUTE / CLEAR / X

- a) **In menu / phonebook entry mode:** Press to exit to the previous level.
- b) **In pre-dial / editing mode:** Press to delete one character / digit. Press and hold to delete all characters / digits.
- c) **During a call:** Press to mute / unmute the call.
- d) **In calls list entry:** Press to delete the entry. Press and hold to delete all call log entries.
- e) **In answering machine mode:** Press to delete the current message.

17 LEFT / PHONEBOOK

- a) **In idle mode / during a call:** Press to access the phonebook.
- b) **In editing mode:** Press to move the cursor to the left.

Cordless Handset LCD display

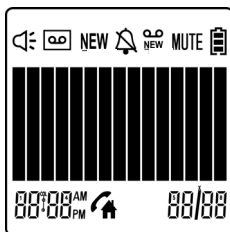

Display Icons



On when speakerphone is turned on.



On when answering machine is turned on.
Flashes when new answering machine message is received.

NEW

Indicates when new call is received.
Off when new call has been viewed.



On when ringer volume is turned off.



On when there is new voice mail not yet listened to. Off when new voice mail has been listened to.

MUTE

On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when low battery level is detected, needs charging.



Animation in cycle. Battery is charging.



In idle mode, the current time is displayed.
In Caller ID mode, the time of call is displayed.

 


On when the line is in use.
Flashes when there is an incoming call.



In idle mode the current date is displayed.
In Caller ID mode, the date of the call is displayed.

Overview of the base

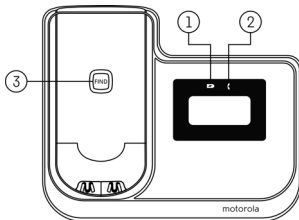

1 CHARGING LED - GREEN

- a) On when the handset is put into base cradle for charging.

2 IN USE LED - RED

- a) **Steadily ON:** During a call or when an extension phone is engaged.
b) **Flashing at a rate similar to the incoming ring pattern:** During an incoming call.
c) **Flashing briefly on and off for 2 minutes:** During paging or registration.

3 FIND

- a) Press to find / page all registered handsets. Press the button again, or any key on the handset, to turn off page signal.

Base LED Indicators

-- Answering machine is OFF.

00 There is no voice message in the answering machine.

09 Flash in idle: Indicates the number of new answering machine messages. (e.g. there are 9 answering machine messages in total, with a capacity for 59.)

Flash during message playing: The selected new answering machine message is being played.

Steadily On: All the new messages have been read and there are 9 answering machine messages in total.

FF Flashing: TAM memory is full.

RR09 Flashing: Indicates an incoming call / recording of an incoming call. The number (e.g. 09) indicates the total number of new messages.


LR Flashing: Indicates the line remote access is in progress.

3. Using the Phone

3.1 Making a call

1. Enter the phone number then press  /FLASH or  /SPEAKER to dial the phone number.

3.2 Speed dialing

1. In idle mode, press and hold a key from  /1 to WXYZ/9 until the number is displayed and dialed.

3.3 Answering a call

1. Press  /FLASH or  /SPEAKER to answer the incoming call.

3.4 Ending a call

1. During a call, press  /BACK or put the handset on the base.



3.5 Adjusting volume

1. During a call, press VOL+ or REDIAL/VOL- to adjust the volume.



3.6 Muting a call

1. During a call, press MUTE to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
2. Press MUTE again to unmute.


3.7 Dialing from the redial list

1. In idle mode, press REDIAL/VOL- then VOL+ or REDIAL/VOL- to select an entry you want to dial.
2. Press  /FLASH or  /SPEAKER to dial the number.

3.8 Dialing from the calls list

1. Idle mode, press CID then VOL+ or REDIAL/VOL- to select a desired call list entry.
2. Press  /FLASH or  /SPEAKER to dial the number.



3.9 Adding an entry to the phonebook

1. In idle mode, press .
2. Press MENU and then VOL+ or REDIAL/VOL- to select ADD.
3. Press MENU and then enter the name.
4. Press MENU and then enter the number.
5. Press MENU to save.




NOTE

Numbers can be up to 24 digits long and names up to 15 characters long. Entries are stored in alphabetical order.

3.10 Storing a phonebook entry as a one touch number

1. In idle mode, press .
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SPEED DIAL**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the speed dial key location from /1 to **WXYZ/9**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to scroll to the entry you want.
5. Press **MENU** to save.

3.11 Dialing from the phonebook

1. Press  and then **VOL+** or **REDIAL/VOL-** to scroll and select the entry you want to dial.
2. Press /FLASH or /SPEAKER to dial the number.

TIPS

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing 2 will show the entries starting with A. Pressing 2 again will show the entries starting with B, etc.

3.12 Caller ID

If you have subscribed to Caller ID service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTE

- If the telephone number is not available for incoming calls, the handset will display **UNAVAILABLE**.
- If the incoming call is from a withheld telephone number, the handset will display **PRIVATE**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

3.12.1 Calls List

The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

NOTE

- When the calls list is full, a new call replaces the oldest one in the list.
- Details of up to 30 calls may be stored.

- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the **NEW** icon on the other handsets remains on (for multi-pack use only).

3.12.2 Viewing the calls list

1. Press **CID** to enter the calls list.
2. Scroll **VOL+** or **REDIAL/VOL-** to through the calls list.

NOTE

- When reviewing an entry from the calls list, press **#/ABC/PAUSE/FORMAT** repeatedly to display the number in different format.

For example, if a caller number is displayed as

888-331-3383, the various formats will be:

331-3383

1-331-3383

888-331-3383

1-888-331-3383

You may choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.

3.12.3 Saving a number from the calls list to the phonebook

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to select the entry you want.
3. Press **MENU** and then enter the name if desired.
4. Press **MENU** and then edit the number if desired.
5. Press **MENU** to save.

3.12.4 Deleting a calls list entry

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to scroll to the entry you want.
3. Press **MUTE** to delete the entry.

3.12.5 Deleting the entire calls list

1. Press **CID** to enter the calls list.
2. Press and hold **MUTE**. **DELETE ALL CALL LOG ENTRIES?** is displayed.
3. Press **MENU** to confirm. All entries will be deleted.

NOTE

You need to review a call before you delete the record from the call list.

3.13 Personal Settings

Menu Map

MAIN MENU

SUB MENU

DATE & TIME

YEAR

DATE

TIME

PHONEBOOK

VIEW

ADD

EDIT

DELETE

DELETE ALL

PB CAPACITY

SPEED DIAL

SETUP BS

DIAL MODE

FLASH TIME

AREA CODE

ANSWER MACHINE

ANSWERER ON (if answering machine is off) Or

ANSWERER OFF (if answering machine is on)

ANSWERER MODE

OF RINGS

ANNOUNCEMENT

RECORD MEMO

CALL SCREENING

DEL ALL OLD MSG

REMOTE ACCESS


SECURITY CODE

RESET SETTINGS

CLR VOICE MAIL

ALL SETTINGS

1. Press **MENU**.
2. Press **VOL+** or **REDIAL/VOL-** to scroll through the menu.
3. Press **MENU** for opening sub-menus and/or saving.


Press /BACK to go back to the previous menu level or cancel an action.

If you do not press any button on the handset for 30 seconds, the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.


3.14 Intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset, and use the conference option.




3.14.1 Calling another handset

1. Press **INT**. Except for the originating handset, all registered handsets will be displayed in the list.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.
4. Press /BACK to hang up.


NOTE

If the handset is not within the valid operation range, this function may not be available. During an intercom call, you will hear an alert tone if there is an incoming external call. You need to press /BACK to hang up the intercom call before answering the incoming external call.



3.14.2 Transferring a call to another handset

1. During an external call, press **INT**. Your call is put on hold.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.
4. When the other handset answers by pressing /FLASH or /SPEAKER, press /BACK to transfer the call. If the other handset does not answer, press **MUTE** to talk to your caller again.

3.14.3 Three-party conference call

1. During an external call, press **INT**. Your caller is put on hold.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.
4. When the other handset answers the intercom call, press **MENU** on the calling handset to set up the conference call.
5. Press /**BACK** on any handset to end a three-party conference call and leave the other handset engaged with the caller.

NOTE

During an external call, pressing /**FLASH** or /**SPEAKER** on any handset will join in the call and set up a conference call.

3.15 Setting the dial mode

The default dialing mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS**.
2. Press **MENU** to select **DIAL MODE**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **TONE** or **PULSE**.
4. Press **MENU** to save.

NOTE

If the pulse mode is selected, press **TONE/*** to switch from pulse to tone dialing temporarily when dialing out. After the call is ended, the dial mode will change back to pulse.

3.16 Setting the flash time

The default flash time is 600MS. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **FLASH TIME**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to the flash time you want.
(8 options are available : 90, 100, 110, 250, 300, 400, 600 and 700MS)
4. Press **MENU** to save.

3.17 Setting the area code

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **AREA CODE**.
3. Press **MENU** and then enter the area code.
4. Press **MENU** to save.

3.18 Registration

The original handset is pre-registered to use.

Additional handsets must be registered to the base before you can use them.

To register an additional handset,

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP HS**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **REGISTRATION**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **YES** or **NO**.
4. Select **YES** then press **MENU** to enter the registration procedure as follows:
 1. Press and hold **FIND** for around 4 seconds on the base.
 2. Place the unregistered cordless handset on the base or charger.
 3. A confirmation tone is generated if registration is successful. **HANDSET X** is displayed where **X** denotes the number of handsets, and then the phone returns to idle.

To register an originally unregistered handset, follow steps 1 through 3 above.

3.19 Resetting all settings

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **RESET SETTINGS**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ALL SETTINGS**.
3. Press **MENU** and to select **YES**. All personalized settings will reset to default.

NOTE

All of your phonebook entries, calls list, and redial list, will remained unchanged.


3.20 Paging/Finding a handset

Press **FIND** on the base. All handsets registered to the base will ring.

To stop the paging, press **FIND** again, or press any key on the handset, or place the handset on the base.

3.21 Using your answering machine

3.21.1 Playing messages

1. Press  on the handset from idle mode. New messages will be played followed by any older messages.

- During the message playback, press the keys below on the handset to perform the following functions:



Press to playback or stop playing messages.



Skip to play the next message.



Press to repeat the current message from the beginning. Press twice to playback the previous message.

MUTE

Delete the current message and the next message will be played.

VOL+

 
Increase the loudspeaker volume.

VOL-

Decrease the loudspeaker volume.



Toggle the message playback via earpiece/speakerphone.



Exit to idle.

NOTE

When you are on a call, the answering system will not answer the second incoming call.

3.21.2 Turning on or off the answering machine

- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWERER ON** or **ANSWERER OFF**. If the answering machine is turned on originally, **ANSWERER OFF** will be displayed. If the answering machine is turned off originally, **ANSWERER ON** will be displayed.
- Press **MENU** to confirm.

3.21.3 Setting the announcement mode

- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWERER MODE**.
- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the announcement modes:
 - ANNC & RECORD** invites your callers to leave a message.
 - ANNOUNCE ONLY** lets callers hear your announcement but they cannot leave a message.
- Press **MENU** to save.

3.21.4 Setting the number of rings

- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **# OF RINGS**.
- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the rings to answer. (4 options are available: **TOLL SAVER**, 3, 4, or 5 RINGS).
- Press **MENU** to save.

NOTE

If the Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there is no message.

3.21.5 Announcement

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

3.21.5.1 Recording the announcement

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** to select **RECORD**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC & RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** to start recording after the beep.
6. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.

NOTE

*When playing the message, pressing **MUTE** will delete it and the pre-recorded message will be played automatically.*

3.21.5.2 Playing the announcement

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **PLAY**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC & RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** and the message is played.

3.21.6 Recording a memo

You can record a memo which is stored in your answering machine and played back like a normal message.



1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **RECORD MEMO**.
3. Press **MENU** to start recording.
4. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.

NOTE

*When playing the message, pressing **MUTE** will delete it permanently.*

3.21.7 Call screening on/off


Call screening allows you to hear the message being recorded, and if you choose you may interrupt the message and take the call.

1. When the answering machine is recording, the cordless handset displays **SCREENING?**.
2. Press **MENU** to listen to the caller through the handset earpiece, the handset displays **CALL SCREENING**.
3. Press  **/SPEAKER** to listen via the handset loudspeaker.
4. Press **MUTE** to stop screening and leave the answering machine to record the message.
5. Press  **/FLASH** to talk to the caller and stop recording.

3.21.8 Deleting all old messages

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **DEL ALL OLD**.
3. Press **MENU**. **DELETE ALL OLD MESSAGES?** is displayed.
4. Press **MENU** to confirm.

NOTE

When the answering machine is full,  will flash if there are new messages. **ERASE SOME ANSWERER MSG** will toggle within 2 seconds with **MEMORY FULL**. At this point, delete some messages to free up memory.

3.21.9 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

3.21.9.1 Turn the remote access on/off

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **REMOTE ACCESS**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ON** or **OFF**.
4. Press **MENU** to confirm.

To enter the remote access mode, dial your phone number from another phone, when you hear the announcement, press **TONE/*** on your another phone and then enter the 4- digit remote security code (the default code is 0000).

After entering the remote access mode, press the following keys to carry out your desired function.

Press...	To...
1	Repeat the message
2	Play/Stop the current message playback
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/Announce and Record modes
5	Delete the message
7	Listen to the Main Menu (for full voice prompts only)

3.21.10 Setting the security code

This is used to change the remote access PIN if necessary.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SECURITY CODE**.
3. Press **MENU** and then enter the 4- digit security code.
4. Press **MENU** to save.

4. Help

The icon is not scrolling when the handset is placed on the base

- Handset not properly seated on the base cradle - readjust the handset on the base.
- Dirty contact - clean the charge contacts by wiping with an alcohol moistened cloth.
- Battery is full - charging is not necessary at this time.

No dial tone

- If there is no base power, check the connections. Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the handset closer to the base.
- Be sure to use only the provided telephone cords.

Poor audio quality

- If the base is too close to electrical appliances, reinforced concrete walls, or metal door frames, move the base from these areas.

No ring tone

- The ringer may be off.
- The volume may need to be increased.

Caller ID does not work

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the rechargeable battery pack.
- Reset the base. Unplug the unit's electrical, then plug it back in.
- If the LED is not lit up, then try to unplug the unit's electrical power, and then plug it back in.

If the handset disconnects from the base during a phone call

- Check that the power cord is connected properly into the base.
- Check that the power adapter is connected properly into the electrical outlet.
- Move the handset closer to the base. It may be out of range.
- Reset the base by unplugging the unit's electrical power. Reset the handset by unplugging and re-plugging its battery pack. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the handset to synchronize with the registered base again.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

5. General information

If your product is not working properly...

1. Read this Quick Start Guide.
2. Visit our website: www.motorolahome.com/support
3. Contact Customer Service:
US and Canada: 1-888-331-3383
Email: support@motorolahome.com
Please download full user manual from our website
Website: <http://www.motorolahome.com/support>

To order a replacement battery pack contact customer service or visit our website.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product vents as that may result in fire or electric shock.
6. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this User's Guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case of a power outage.
10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

CAUTION

To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 20 cm from nearby persons.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to the battery label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage. **Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada: 1-888-331-3383

Email: support@motorolahome.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty

card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE, regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE, or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User's Guide.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.0. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

Technical Specifications

RF frequency band	1921.536 MHz -1928.448 MHz
Channels	5
Operating temperature	5°C to 45°C
Telephone base Voltage (AV voltage, 60Hz)	96 — 130 Vms
Telephone base voltage(Adapter output)	5VDC, 450 mA
Handset voltage	2.4V 500mAh Ni-MH battery pack
Charger voltage (Adapter output)	6V AC, 400mA for Handset Charger

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.

US_EN Version 9.0

