


Model: SCOUT1500 - Quick Start Guide

For a full explanation of all features and instructions, please refer to the User's Guide.


1 Setting up your digital video pet monitor

A Fixing the Outdoor Pet Unit Mounting Plate on the wall

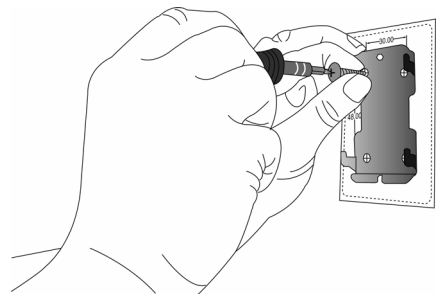


- Fasten the mounting plate on the wall with the 4 Philips head screws (provided).

B Hanging Outdoor Pet Unit on the Mounting Plate

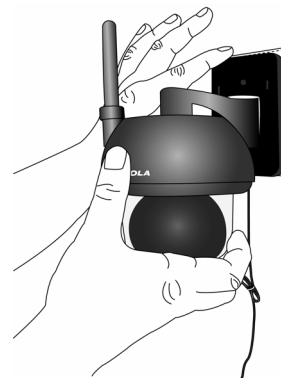

- Place the 4 mounting slots of the camera base on to 4 catches on the mounting plate. Make sure the unit sits firmly on the mounting plate with the center holes of 2 parts lined up.

C Secure the Outdoor Pet Unit

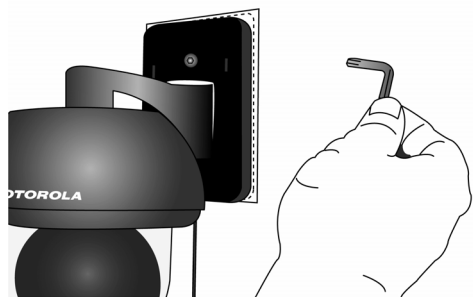


- Fasten the unit to the mounting plate at the center hole with the tamper-proof screw by the wrench key provided.

D Connecting Power Supply for the Outdoor Pet Unit



- Plug the Outdoor Pet Unit's power adapter into the extension cord socket and then plug the power adapter into the electrical outlet.

E Connecting power supply for the Indoor Pet Unit

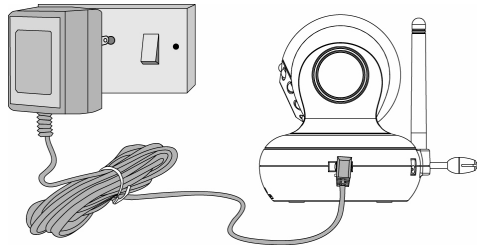

- Connect the small plug of the power adapter to the pet unit and the other end to the electrical outlet.
- Only use the enclosed adapter (5.9V DC/ 1000mA).


F Installing the battery pack for the Owner Unit



Black Red


- Insert the wire tab of the rechargeable battery pack into the contact slot as shown and fit the battery pack into the compartment.

G Fastening the cover for the Owner Unit

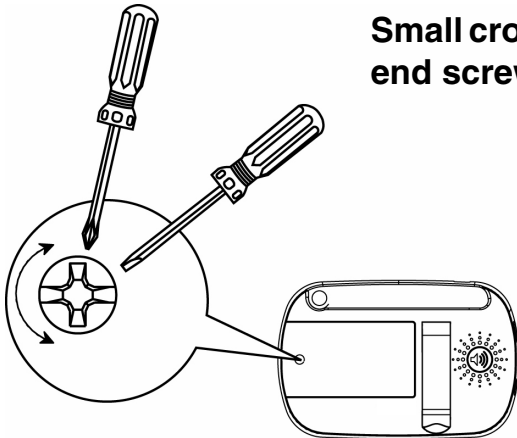

Small cross head or Flat end screwdriver

H Connecting power supply for the Owner Unit

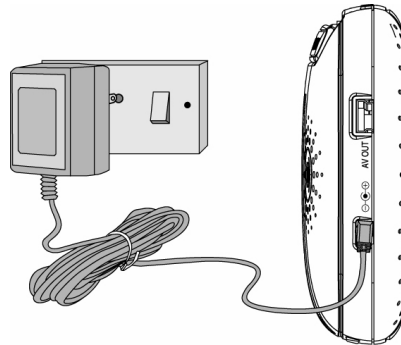








- Connect the small plug of the power adapter to the owner unit and the other end to the electrical outlet.
- Only use the enclosed adapter (6V DC/500mA).

! WARNING:

STRANGULATION HAZARD – In case this unit is being used to monitor infants or children, keep the unit and adapter cord more than 3 feet from the crib and out of their reach. Never place camera or cords within a crib or near a bed. Secure the cord away from children's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

As with any electrical device, supervision of your pet's usage should be exercised until your pet is acclimated to the product. If your pet is prone to chewing, we strongly recommend you keep this and all other electrical devices out of its reach.

2 Basic operation of the keys

Owner unit		
	POWER ON-OFF / VIDEO button	Press and hold to switch the unit on/off. Press to turn the LCD display on/off.
	UP/DOWN buttons	Press to tilt the camera upward or downward. Press to adjust menu settings.
	LEFT/RIGHT buttons	Press to pan the camera left or right. Press to access different menu options.
	MENU button	Press to open menu options or exit.
	OK button	Press to confirm a selection.
	QUICK SCAN button	Press to double the pan/tilt speed of the Outdoor Pet Unit.
	TALK button	Press and hold to talk to your Indoor Pet Unit.
Indoor Pet Unit		
ON/OFF switch		Push the power switch to the right to switch the unit on. Push the power switch to the left to switch the unit off.

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service:
US and Canada 1-888-331-3383



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2013 Motorola Mobility LLC. All rights reserved.

Printed in China
Version 3.0

