



motorola

MODELS:


MBP421,
MBP421/2,
MBP421/3,
MBP421/4

QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.


1. Setting up your Video Baby Monitor

A. Baby unit power supply

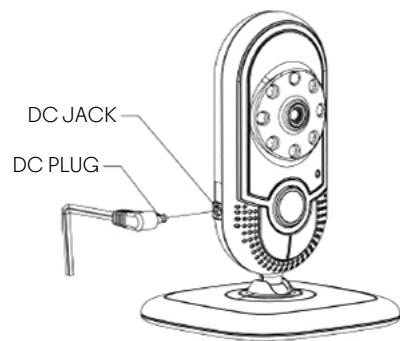


1. Insert the DC plug of the power adapter with the smaller DC plug into the DC jack in the side of the baby unit, as shown.
2. Connect the other end of the power adapter to a suitable power outlet.

B. Parent unit battery installation

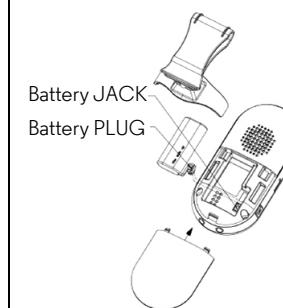

- A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be moved without losing the link and picture from the camera unit(s). Charge the parent unit before you use it for the first time or when the parent unit indicates that the battery is low.
1. Take off the belt clip/stand.
 2. Slide off the battery compartment cover.
 3. Insert the plug of the battery pack into the jack inside the battery compartment, and fit the battery pack into the compartment.
 4. Replace the battery compartment cover and reinstall the belt clip/stand.
 5. Insert the DC plug of the power adapter with the bigger DC plug into the DC jack in the side of the parent unit.
 6. Connect the other end of the power adapter to a suitable power outlet.
 7. The Charging Indicator comes on.

C. Belt clip/stand on parent unit

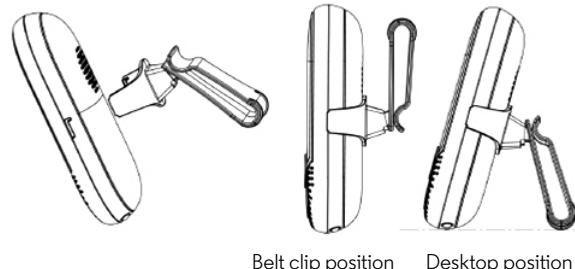

1. The belt clip/stand attaches to the back of the parent unit and clips into the locking slots on each side.

NOTE

It will only fit one way, as indicated by UP and the arrows on the inside of the clip.

2. The unit comes with the accessory fitted in the belt clip position.
3. You can convert it into the stand mode, by simply pulling the back part of the clip out slightly and then rotating it by half a turn, as shown in the diagram on the left.

2. Basic explanation of the display icons

Parent Unit		
	Connection status	displays when strong signal strength is detected between the baby unit and the parent unit. or displays when moderate signal strength is detected between the baby unit and the parent unit. displays when the link between the baby unit and the parent unit is lost. displays when the parent unit is searching for a baby unit.
	Current view status	Displays the number of the baby unit that is being viewed.
	Zoom	Displays when the camera at the baby unit has zoomed in.
	Volume off	Displays when the volume is turned off.
	Sound activation	You can turn on or off the sound activation feature to check on your baby whenever there is sound in the baby room. Displays when the sound activation is on. The baby unit detects the sound in the baby room, and it automatically goes on to show the baby on the video display.
	Battery status	animates when the battery is charging. displays solid when the battery is fully charged. displays when the battery is low and needs charging. displays when no battery is installed but operates using AC power, or the battery has been installed incorrectly.
	Camera selection	You can select the screen to view images from a particular baby unit, or view all baby units in Patrol Mode.
	Brightness	You can change the brightness of the screen.
	Sensitivity	You can change the sound sensitivity level of the baby unit. It monitors the baby unit on picking up any sound activities in your baby's room.
	Pairing	The baby unit and parent unit provided are already paired. You can add or replace baby units (purchased separately) to your baby monitor system.

3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service:
US and Canada 1-888-331-3383
Email: motorola@encompass.com



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2014 Motorola Mobility LLC. All rights reserved.