



motorola

# QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

## 1. Setting up your Digital Video Baby Monitor

MODELS:


MBP854CONNECT

MBP854CONNECT-2

MBP854CONNECT-3


MBP854CONNECT-4

### A. Connecting power supply for the Baby Unit

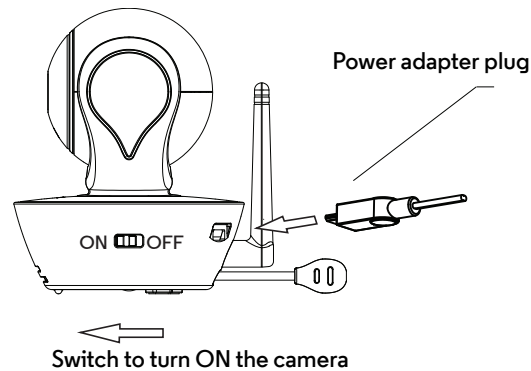

Connect the micro USB plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet.  
Only use the enclosed adapter (5V DC/1500mA). Ensure the ON/OFF switch is at "ON" position.

### B. Connecting the power supply for the Parent Unit

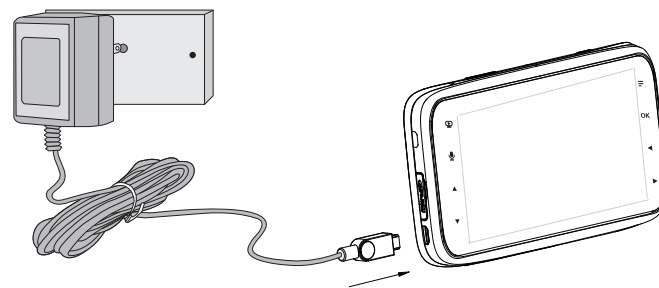









Connect the micro USB plug of the power adapter to the parent unit and the other end to a suitable electrical outlet.  
Only use the enclosed adapter (5V DC/1500mA). Recommend charging at least 16 hours before first use.



#### WARNING:

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away).  
Never use extension cords with AC Adapters. Only use the AC Adapters provided.

## 2. Basic operation of the keys

Parent Unit		
	ON/OFF button	Press and hold to switch on/off the Unit.
	UP/DOWN buttons	Press to tilt the camera upward or downward. Press to adjust menu settings.
	LEFT/RIGHT buttons	Press to pan the camera left or right. Press to access different menu options.
	MENU button	Press to open menu options or exit.
	OK button	Press to confirm a selection.
	VIDEO button	Press to turn on/off the LCD display.
	TALK button	Press and hold to talk to your baby.
	Volume button	Press -/+ to select volume level.
	RESET button	Press and hold with small pin for resetting the unit.
Baby Unit		
	ON/OFF switch	Push power switch to the right to switch on the Unit. Push power switch to the left to switch off the Unit.

## 3. Setting up the Camera Unit for Wi-Fi<sup>®</sup> Internet Viewing

### A. Install Hubble for Motorola Monitors App.



Download the Hubble for Motorola Monitors App from the App Store for iOS<sup>®</sup> devices or from the Google Play<sup>™</sup> Store for Android<sup>™</sup> devices.

## B. View on Compatible Smartphones, Tablets and Computers.



1. Run the Hubble App on your compatible smartphone or tablet.
2. Follow the in-app instructions to create your Hubble account.
3. Log in to your account on your compatible smartphone, tablet or via <https://app.hubbleconnected.com/#login> on your PC to access your live camera stream.

Please take note of the following minimum system requirements:

Smartphones/Tablets: iOS 7, Android™ 4.2 PC (if used for viewing): Windows® 7, Mac OS® 10.7, Chrome™ 24, Internet Explorer® 9, Safari® 6, Firefox® 18, Adobe® Flash® 15, Java™ 7

## 4. Customer Support

If you are experiencing any issues with your Motorola Digital Video Baby Monitor, you can contact our customer support team.

US and Canada 1-888-331-3383

Email: [support@motorlamonitors.com](mailto:support@motorlamonitors.com)

or visit our help section on our website [www.motorola.com](http://www.motorola.com)



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Internet Explorer and Windows are trademarks of the Microsoft group of companies. Firefox is a registered trademark of the Mozilla Foundation. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated. Java is a registered trademark of Oracle and/or its affiliates. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.



Printed in China

EN\_US Version 5.0