



motorola


QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

1. Setting up your Digital Baby Monitor


MODELS:
MBP27T,
MBP27T/2,
MBP27T/3,
MBP27T/4

A. Connecting power supply for the Baby Unit

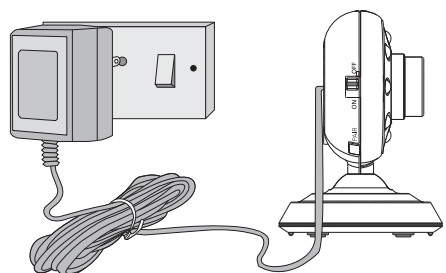


Connect the small plug of the power adapter to the Baby Unit and the other end to the electrical outlet. Only use the enclosed adapter (6V DC / 500mA).

B. Installing the battery pack for the Parent Unit

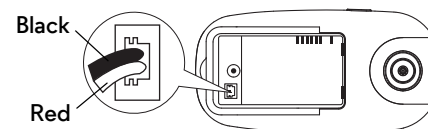


Insert the wire tab of the rechargeable battery pack into the contact slot as shown above and fit the battery pack into the compartment.

C. Fastening the cover for the Parent Unit

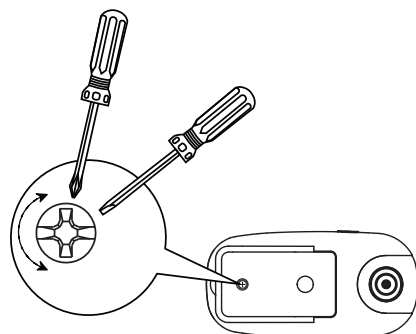

Small cross head or Flat end screwdriver.

D. Connecting power supply for the Parent Unit

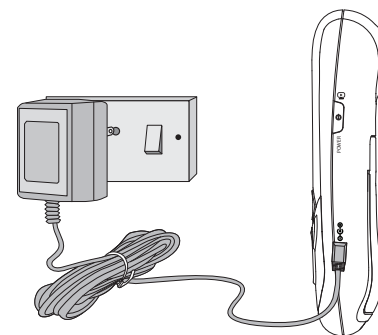










Connect the small plug of the power adapter to the Parent Unit and the other end to the electrical outlet. Only use the enclosed adapter (6V DC / 500mA).



WARNING:

STRANGULATION HAZARD - Keep the unit and adapter cord more than 1 meter from the cot and out of baby's reach. NEVER place camera or cords within the cot. Secure the cord more than 1 meter away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

2. Basic operation of the keys

Parent Unit	
 Power ON/OFF button	Press and hold to turn the Unit ON/OFF. Press to turn the display ON/OFF.
 UP/VOL+ buttons	Press to increase sound volume. Press to move up menu options/settings. Press to move up in digital pan/tilt mode.
 DOWN/VOL- buttons	Press to decrease sound volume. Press to move down menu options/settings. Press to move down in digital pan/tilt mode.
 MENU/OK button	Press to open menu options. Press to confirm a selection. Press to pan right in digital pan/tilt mode.
 Return/Switch Camera button	Press to return to previous menu level. Press to switch camera units. (If paired with more than one camera) Press to pan left in digital pan/tilt mode.
 Digital Pan/Tilt button	Press to enter/exit digital pan/tilt mode.
 TALK button	Press and hold to speak to your baby.
 Surface temperature mode	Press and hold to measure the liquid surface temperature.
 Forehead temperature mode	Press and hold to measure the baby body temperature.
Baby Unit	
ON/OFF switch	Slide the power switch down to switch on the Unit. Slide the power switch up to switch off the Unit.

3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:
UK 0845 218 0890
ROI 08187 62092



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2013 Motorola Mobility LLC. All rights reserved.

Printed in China
Version 4.0